



PORTABLE SAFE

T412E



Usage and Maintenance Instructions

INTRODUCTION

Thank you for deciding to purchase the Portable Safe by Eagle.

BEFORE USE

Carefully remove all packaging. Avoid using any knives or other sharp instruments as this may damage the item. Check the product for any visible damage. If you see any damage or suspect a fault, do not use your product, but contact your supplier for support.

IMPORTANT

We do not recommend simple combinations such as 0-0-0 or 5-5-5. It is recommended that the dials are rotated weekly to keep them moving freely.

CLEANING

Clean your Portable Safe using a mild detergent with a slightly damp, soft cloth only. Only use a mild detergent or disinfectant; never use an abrasive cleaner.

CARE & MAINTENANCE

Please make a safety check of the product at regular intervals or if you have any concerns.

REISSUE

If you reissue or are about to reissue this product, please thoroughly check all components for their safety.

If in any doubt, please do not issue or use, but immediately contact your supplier for service support.

IMPORTANT INFORMATION

The information given in this instruction booklet must not be taken as forming part of or establishing any contractual or other commitment by Electrovision Ltd or its agents or its subsidiaries and no warranty or representation concerning the information is given.

Please exercise common sense and do not take any unnecessary risks when using this product; as the user you must accept liability for safety when using the product.

Please do not hesitate to contact the person who issued this product to you or the manufacturer (detailed below) if you have any queries concerning the assembly/use of your product.

INSTRUCTIONS

Opening the portable safe:

Default Factory Code: 0-0-0

Rotate the dials to the correct code.

Lift the lid.

Add or remove valuables.

Close the lid.

Rotate dials to incorrect code to lock.

See next page for how to set a new combination

Set a new combination:

PLEASE NOTE: THE CODE CANNOT BE RESET UNLESS THE SAFE IS OPENED. THERE IS NO OVERRIDE.

Open the safe (as page 2).

Remove the bottom lining from the inside.

Push the reset lever from position B to position A (See Diagram 1)


Rotate the dials to your desired combination.

Return the lever to position A.

Return the bottom lining to the inside of the safe.

Close the lid and rotate the dials to lock the safe.

Diagram 1

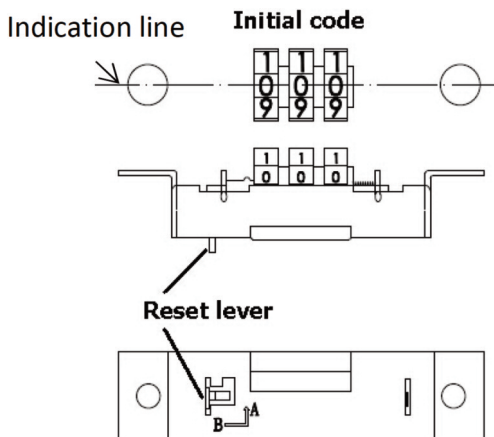

Locking Cable:

Rotate the dials to open the safe.

Loosen the looped cable.


Wrap cable around stationary object.

Fit end (A) through loop (B). (See Diagram 2)

Place end A into the cable lock slot on the left edge of the safe.

Close the lid and lock the safe.

Diagram 2

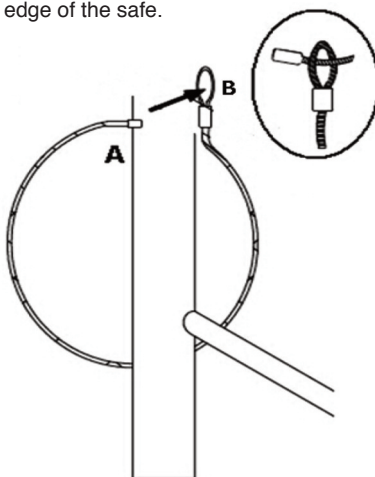

SERVICE WARRANTY

Electrovision guarantees the product free from defects in materials and workmanship for a period of twelve months.

The product you buy may sometimes differ slightly from illustrations. This warranty is in addition to, and does not affect, your statutory rights.

Our guarantee is administered by our retailers.

If your product arrives damaged, you must contact the retailer from whom you bought it. The retailer's contact details will be on the invoice that arrived with the product, or on the e-mail you received when you placed the order. Do not contact Electrovision, only your retailer can arrange a replacement.

If your product fails within the guarantee period, and needs to be repaired or replaced, you must contact the retailer from whom you bought it.

The retailer's contact details will be on the invoice that arrived with the product, or on the e-mail you received when you placed the order.

If you have just received your product and require technical help in using it, please call our Help Desk on (0845) 459 4816

Electrovision Ltd.,
Lancots Lane, Sutton,
St. Helens, Merseyside.
WA9 3EX
Website: www.electrovision.co.uk