

 
Encore - Coffee Tables

ENC-TAB01 - ENC-TAB02




ASSEMBLY INSTRUCTIONS

Encore
Coffee Tables


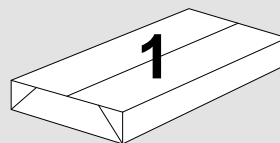


Pack 1:
1x Top Pack


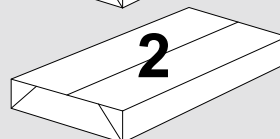 


Pack 2:
1x Leg Pack & Fitting Kit

 
 
TOOLS REQUIRED
FOR ASSEMBLY

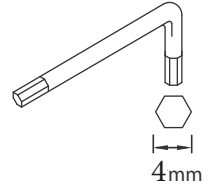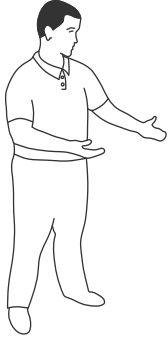


DONT STRUGGLE
2 MAN LIFT

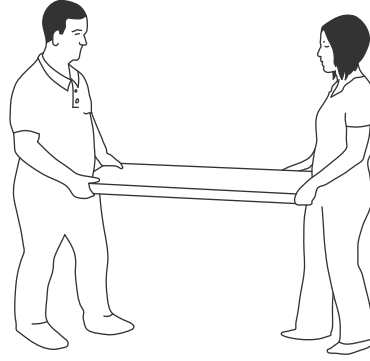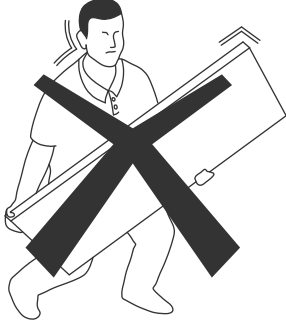  


ALWAYS HANDLE
ITEMS WITH CARE

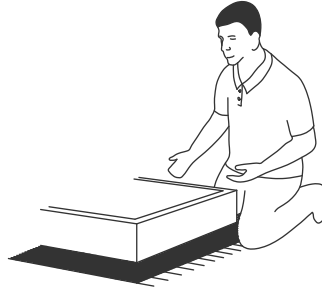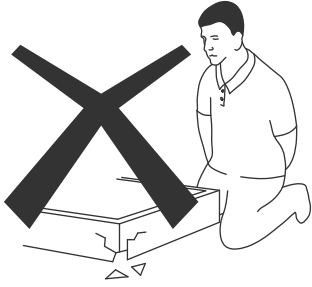  

IF UNSURE CALL
FOR ASSISTANCE

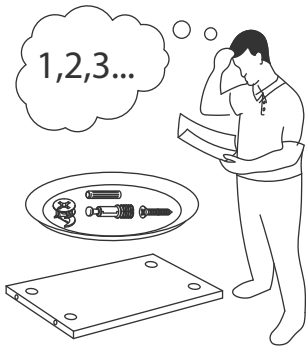 


KEEP FITTINGS AWAY
FROM CHILDREN

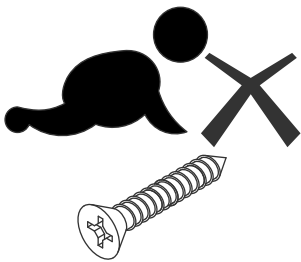 




 Please check that you have all the panels

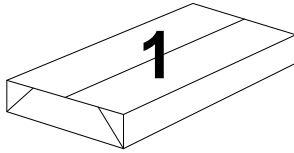


PACK 1:
1 x Top Panel

 600 x 600mm = EN-TBL-6-TOP
1000 x 600mm = EN-TBL-10-TOP

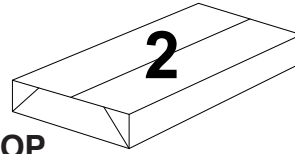

PACK 2:
1 x Leg Pack

 Metal Leg = EN-MTBL
or
Wooden Leg = EN-WTBL

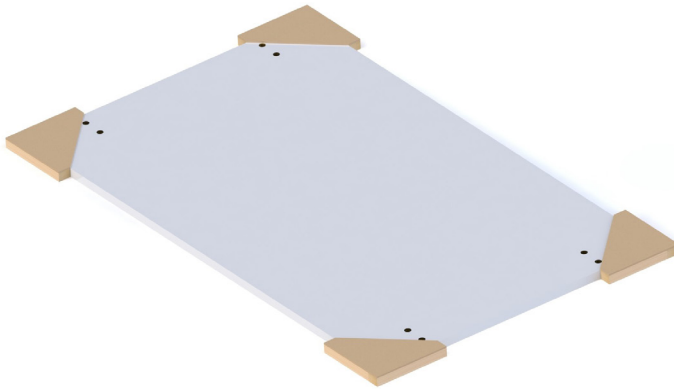

EN-MTBL (MF)
or
EN-WTBL (WF)



Please check that you have all the fittings

FITTINGS SUPPLIED



Connector Bolt - M6

Size	PCS
20mm (MF)	8
or	
50mm (WF)	8

 
ENCORE COFFEE TABLE

1

Step 1

Unpack your new Encore coffee table and please recycle all packaging.



Place the top so the holes are facing upwards.

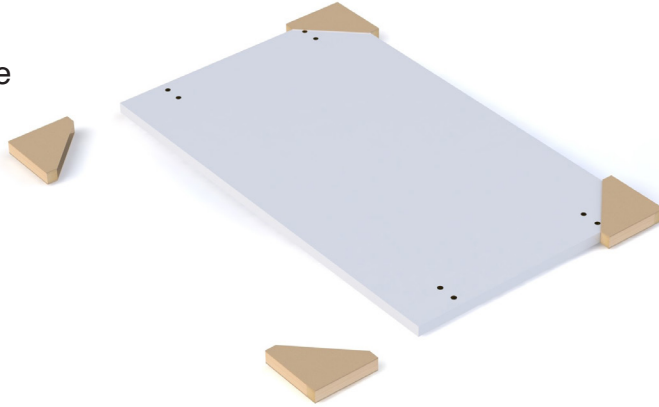

2

Step 2

  Align holes in the legs to ones in the top panel, screw in the M6 bolts as shown.

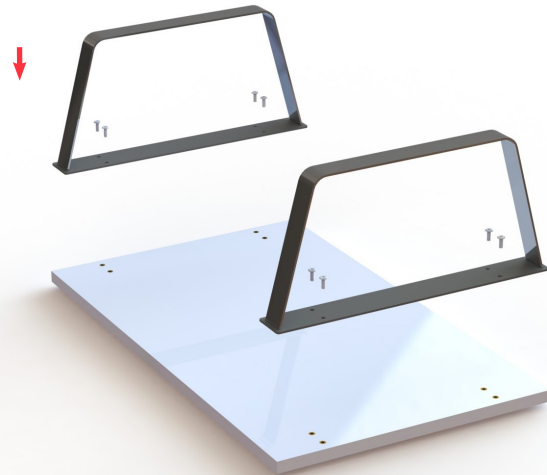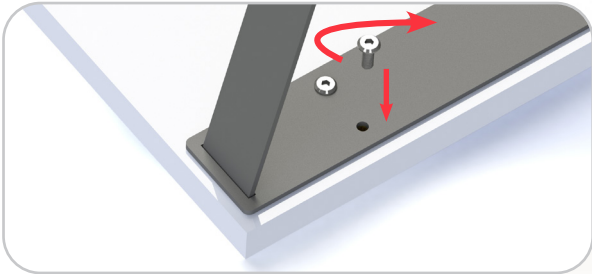

3

Step 3

Turn over the table to its upright position.

