


Market L-Shaped Desk

Model 5425767

Table of Contents

Assembly Tools Required

Part Identification	3
Hardware Identification	4
Assembly Steps	5-20
Français	21-24
Español	25-28
Safety	29-30
Warranty	31

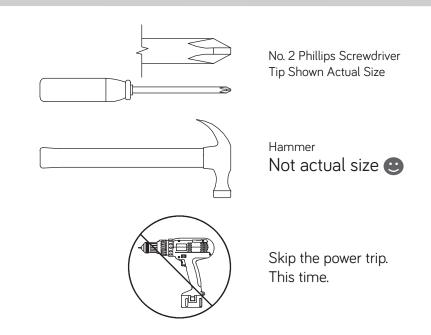

Part Identification




While not all parts are labeled, some of the parts will have a label or an inked letter on the edge to help distinguish similar parts from each other. Use this part identification to help identify similar parts.


Α	LEFT END LEG (1)
В	LEFT UPRIGHT LEG (1)
С	BACK (1)
D	SHELF/BOTTOM (2)
Е	SMALL DRAWER FRONT (1)
F	LARGE DRAWER FRONT (1)
G	LARGE LEFT DRAWER SIDE (1)
Н	LARGE RIGHT DRAWER SIDE (1)

J	LARGE DRAWER BACK (1)
K	SMALL LEFT DRAWER SIDE (1)
L	SMALL RIGHT DRAWER SIDE (1)
М	SMALL DRAWER BACK (1)
N	DRAWER BOTTOM (2)
0	SMALL TOP (1)
Р	BRACE (1)
Q	WIRE SHELF (1)

R	FRONT LONG BRACE (1)
S	REAR LONG BRACE (1)
Т	RIGHT END LEG (1)
U	REAR LEG (1)
٧	LARGE TOP (1)
W	SHORT BRACE (1)

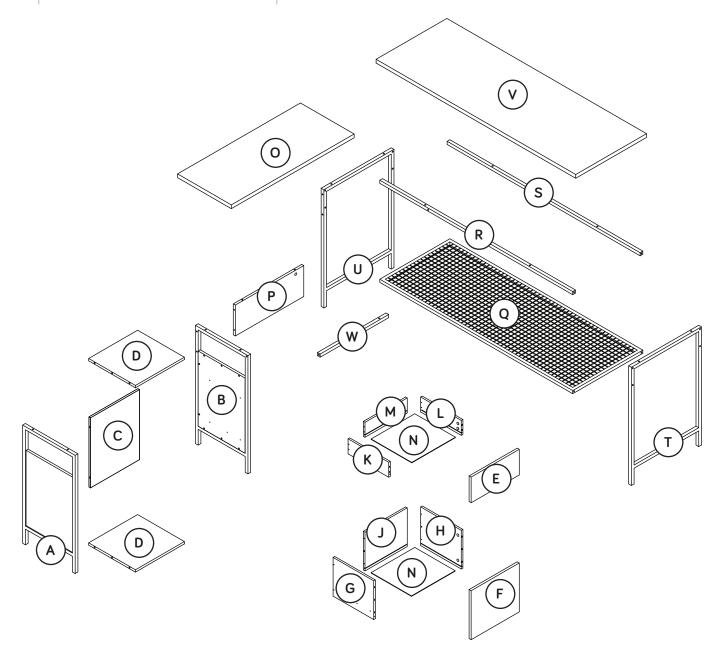



Hardware Identification

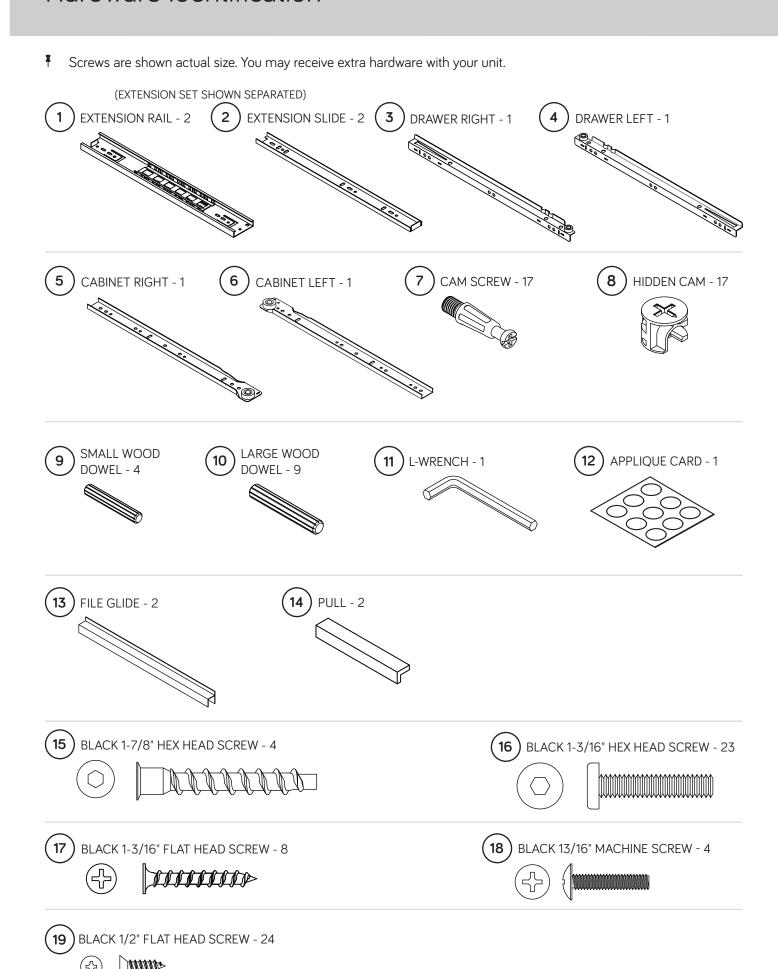


Hardware Usage Guide


HOW TO USE A HIDDEN CAM & CAM SCREW OR CAM DOWEL

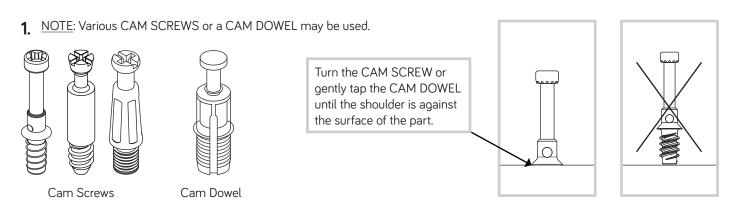

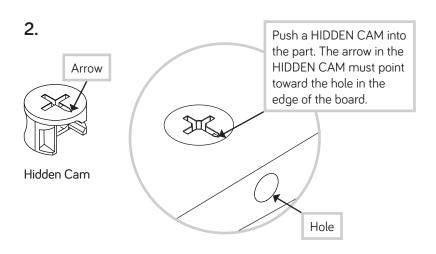


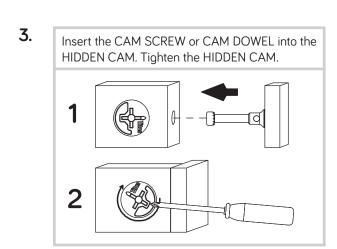


- Assemble your unit on a carpeted floor or on the empty carton to avoid scratching your unit or the floor.
- Turn eight CAM SCREWS (7) into the LEFT END LEG (A) and LEFT UPRIGHT LEG (B).

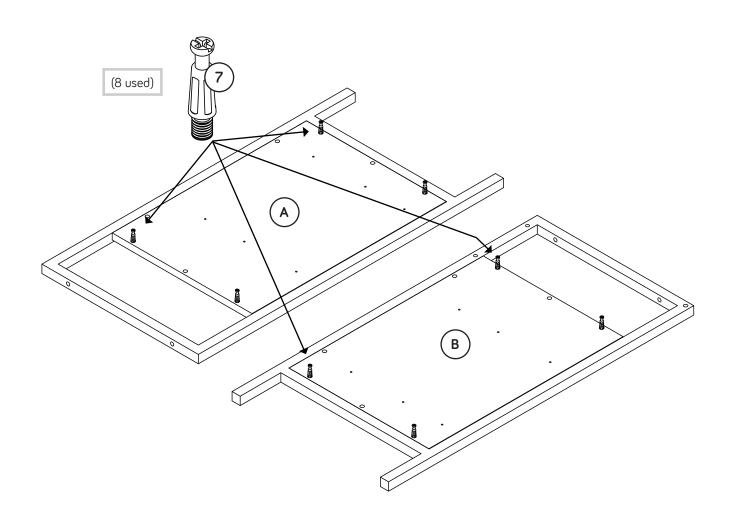


- Fasten the CABINET RIGHT (5) to the LEFT UPRIGHT LEG (B). Use three BLACK 1/2" FLAT HEAD SCREWS (19).
- Fasten the CABINET LEFT (6) to the LEFT END LEG (A). Use three BLACK 1/2" FLAT HEAD SCREWS (19).
- Separate the EXTENSION SLIDES (2) from the EXTENSION RAILS (1) as shown in the upper diagram below. Be prepared, the parts are greasy.
- Fasten the EXTENSION RAILS (1) to the LEFT END LEG (A) and LEFT UPRIGHT LEG (B). Use six BLACK 1/2" FLAT HEAD SCREWS (19).
- NOTE: For each EXTENSION RAIL, turn a SCREW into the hole shown in the enlarged diagram. Then, slide the inner cartridge of the EXTENSION RAIL in to find the other holes that line up with the holes in the LEFT LEGS. Turn a SCREW into those holes.

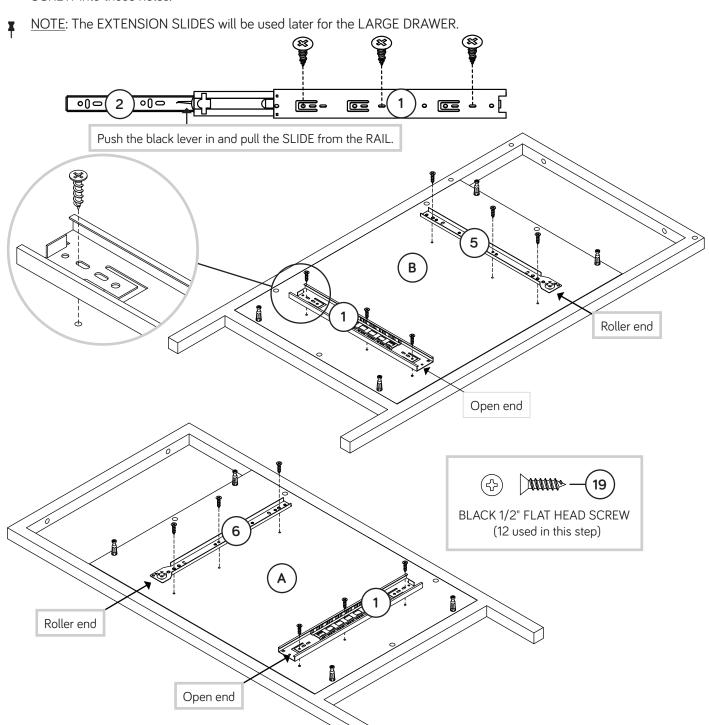


- Insert eight LARGE WOOD DOWELS (10) into the edges of the BACK (C) and SHELF/BOTTOMS (D).
- Push eight HIDDEN CAMS (8) into the SHELF/BOTTOMS (D).

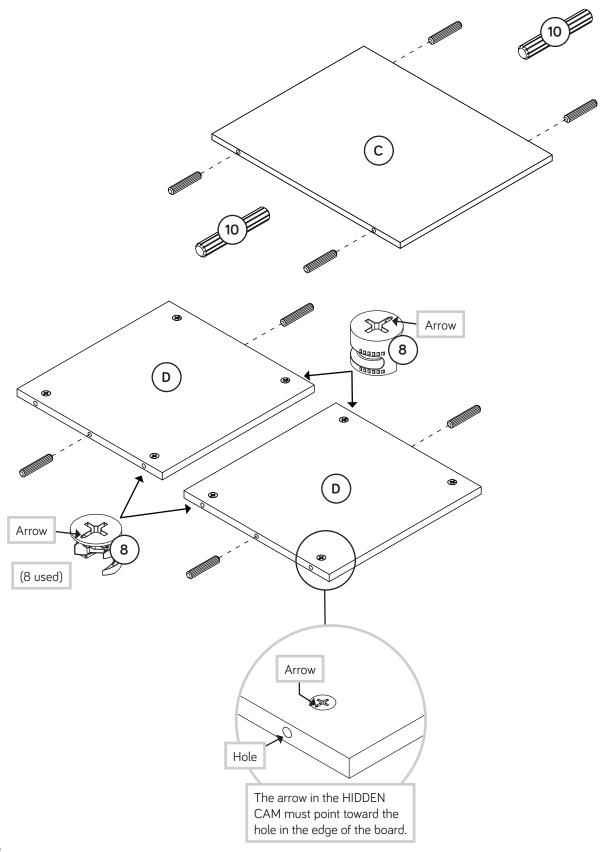


 
- Fasten the SHELF/BOTTOMS (D) and the BACK (C) to the LEFT UPRIGHT LEG (B). Tighten four HIDDEN CAMS.
- NOTE: Be sure the WOOD DOWELS in the SHELF/BOTTOMS and BACK (C) insert into the LEFT UPRIGHT LEG.
- Fasten the LEFT END LEG (A) to the BACK (C) and SHELF/BOTTOMS (D). Tighten four HIDDEN CAMS.
- NOTE: Be sure the WOOD DOWELS in the SHELF/BOTTOMS and BACK insert into the LEFT END LEG.



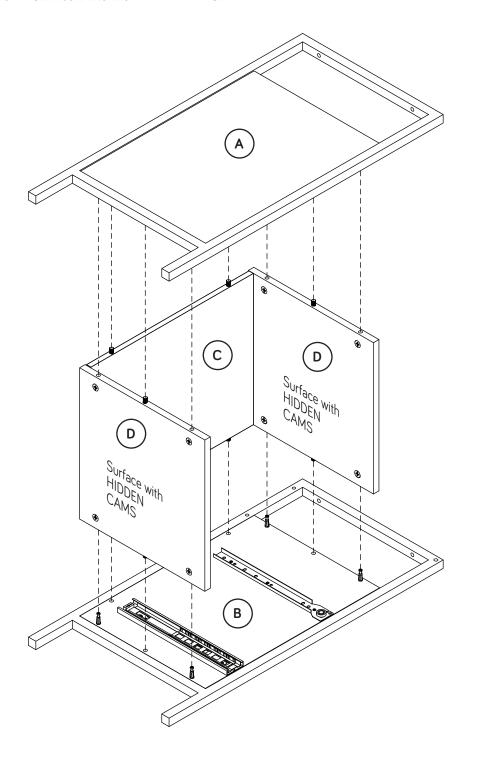


- Fasten the LEGS (T and U) to the WIRE SHELF (Q). Tighten four BLACK 1-3/16" HEX HEAD SCREWS (16) using the L-WRENCH (11).
- Fasten the LONG BRACES (R and S) to the LEGS (T and U). Tighten four BLACK 1-3/16" HEX HEAD SCREWS (16) using the L-WRENCH (11).

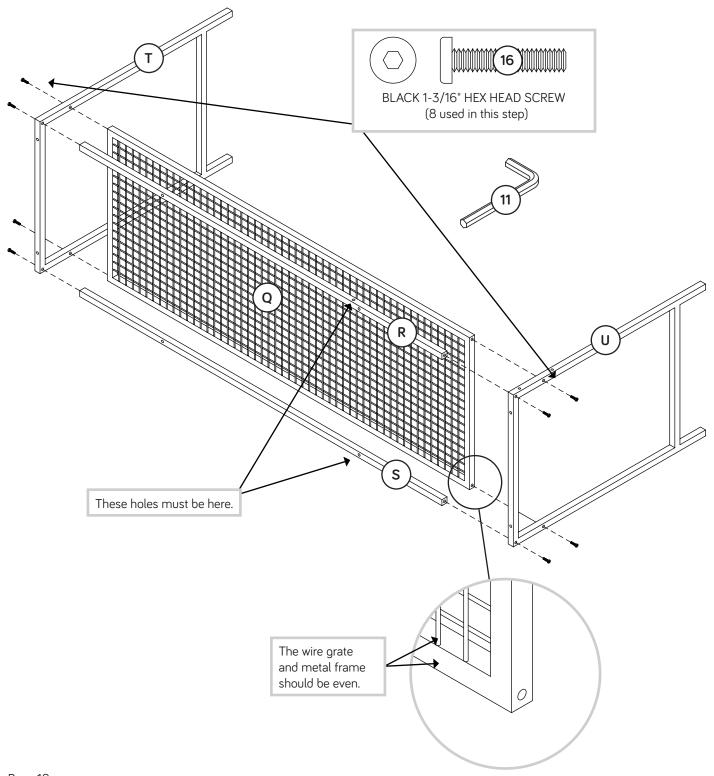

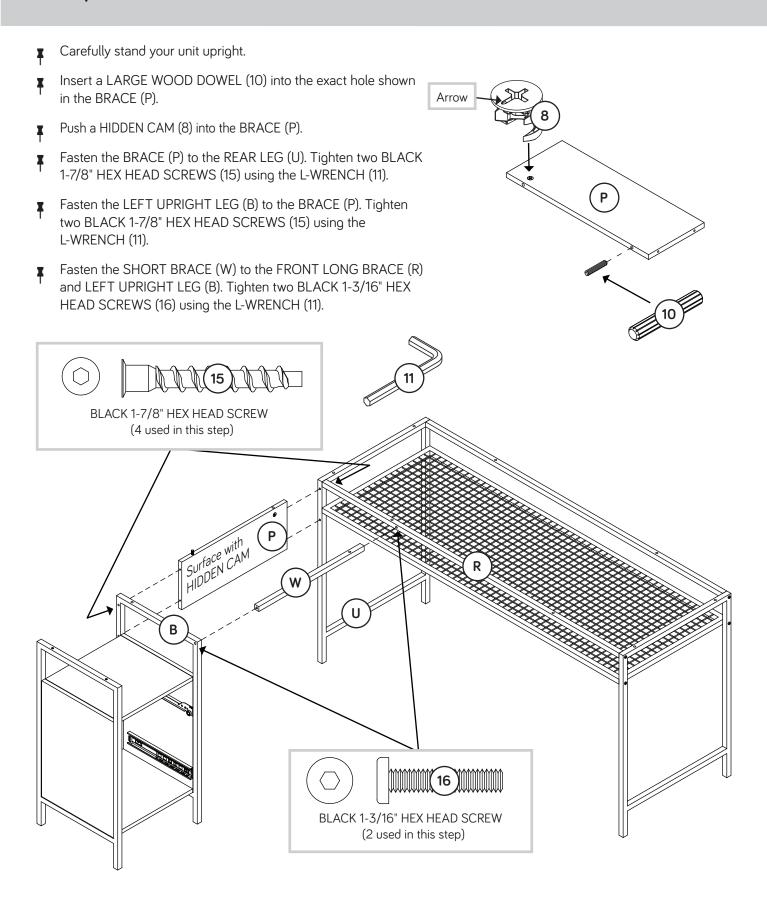


Fasten the LARGE TOP (V) to the LONG BRACES (R and S) and LEGS (T and U). Tighten eight BLACK 1-3/16" HEX HEAD SCREWS (16) using the L-WRENCH (11).

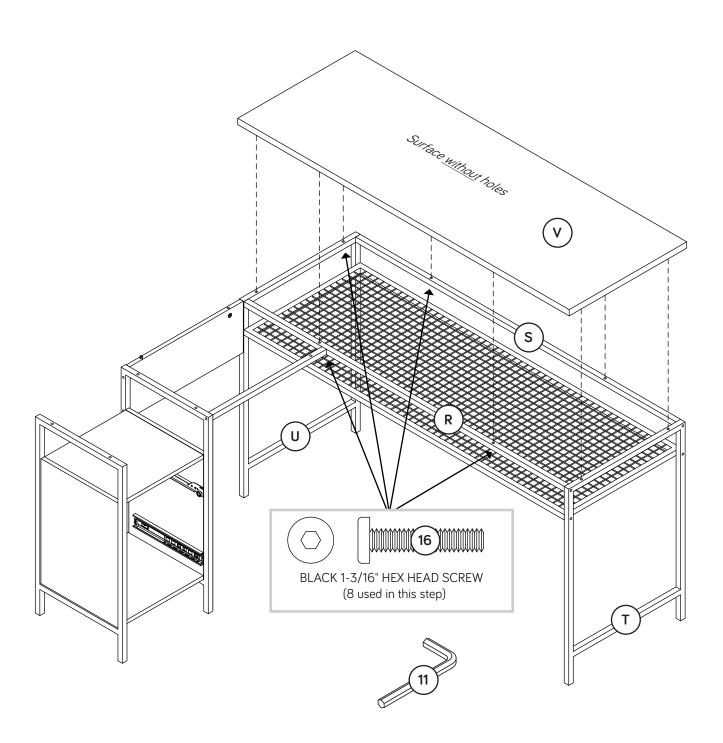



- Turn a CAM SCREW (7) into the SMALL TOP (0).
- Flip the SMALL TOP over and fasten it to the LEGS (A and B), SHORT BRACE (W) and BRACE (P). Tighten the HIDDEN CAM in the BRACE. Tighten five BLACK 1-3/16" HEX HEAD SCREWS (16) using the L-WRENCH (11).
- NOTE: Be sure the WOOD DOWEL in the BRACE inserts into the SMALL TOP.



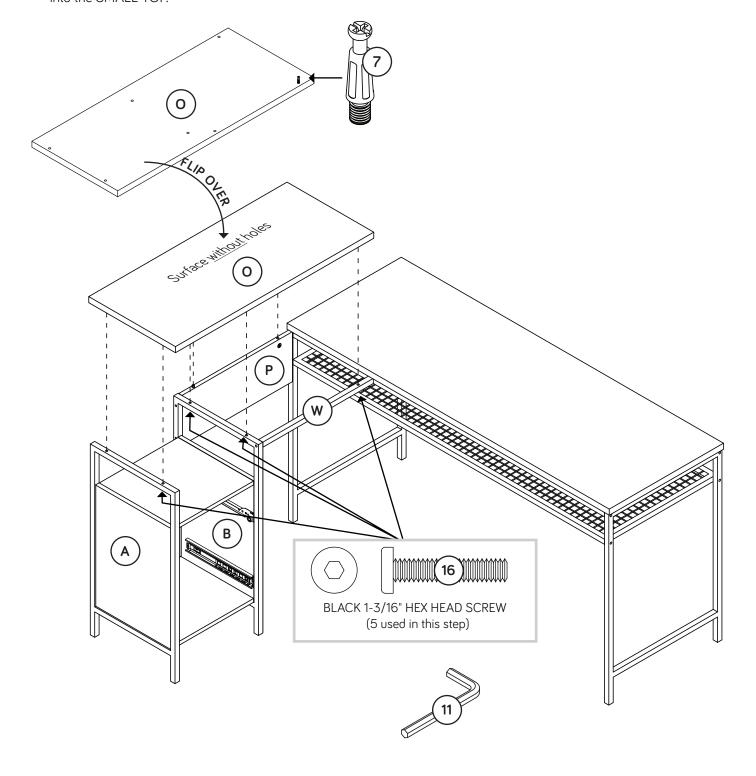


- Turn eight CAM SCREWS (7) into the DRAWER FRONTS (E and F).
- Insert four SMALL WOOD DOWELS (9) into the edges of the LARGE DRAWER SIDE (G and H) and LARGE DRAWER BACK (J).
- Push eight HIDDEN CAMS (8) into the DRAWER SIDES (G, H, K, and L).

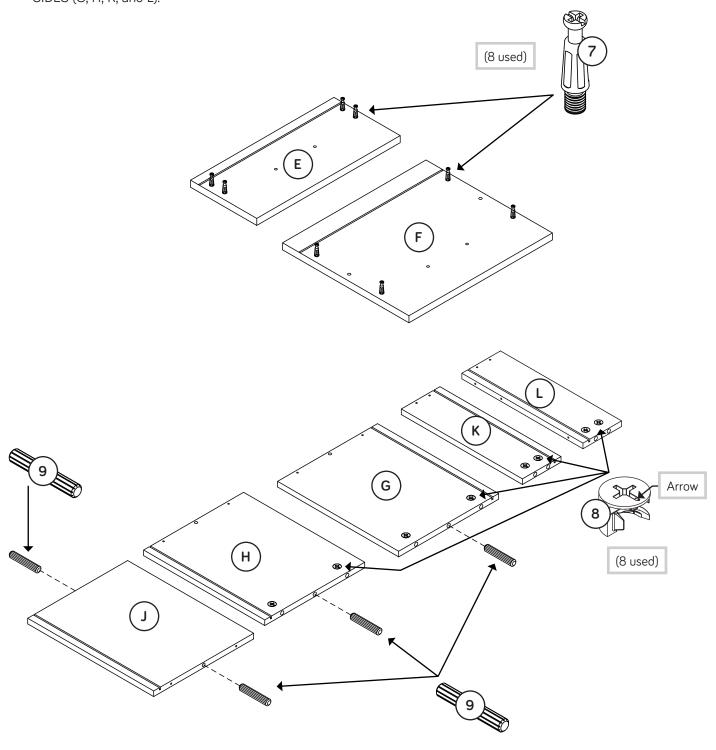

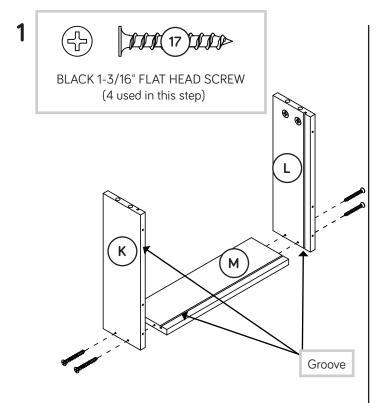


2

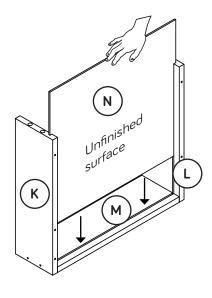

Fasten the SMALL DRAWER SIDES (K and L) to the SMALL DRAWER BACK (M). Use four BLACK 1-3/16" FLAT HEAD SCREWS (17).


Slide a DRAWER BOTTOM (N) into the grooves in the SMALL DRAWER SIDES (K and L) and SMALL DRAWER BACK (M).


3

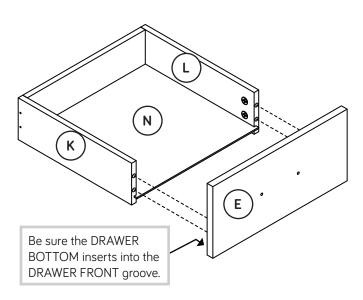

- Fasten the SMALL DRAWER FRONT (E) to the SMALL DRAWER SIDES (K and L). Tighten four HIDDEN CAMS.
- NOTE: Be sure the DRAWER BOTTOM (N) inserts into the groove of the SMALL DRAWER FRONT (E).

- Fasten a PULL (14) to the SMALL DRAWER FRONT (E). Use two BLACK 13/16" MACHINE SCREWS (18).
- Flip the SMALL DRAWER over. Fasten the DRAWER RIGHT (3) to the SMALL RIGHT DRAWER SIDE (L) and the DRAWER LEFT (4) to the SMALL LEFT DRAWER SIDE (K). Use six BLACK 1/2" FLAT HEAD SCREWS (19).

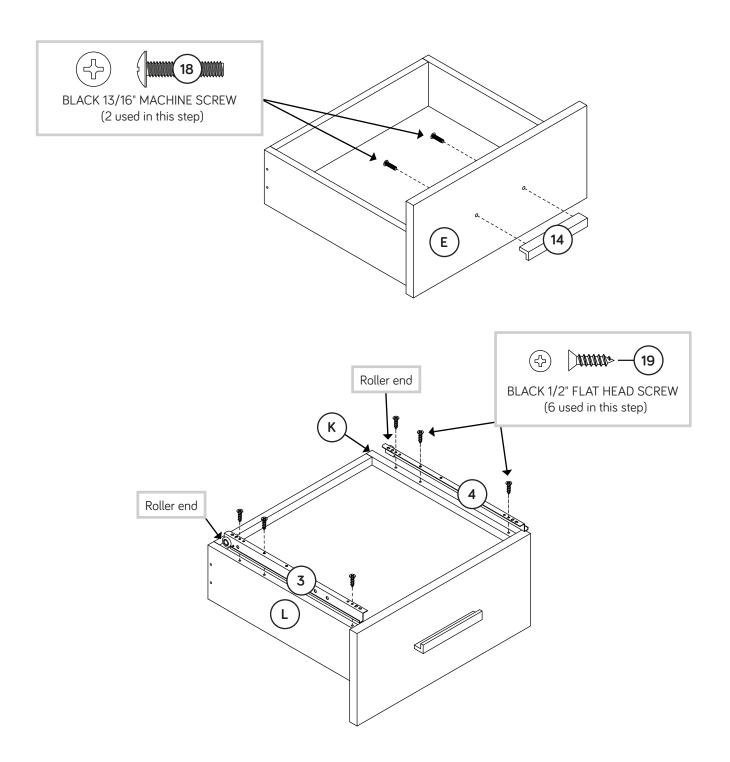


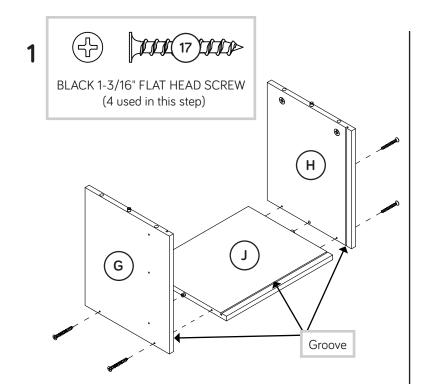

Fasten the LARGE DRAWER SIDES (G and H) to the LARGE DRAWER BACK (J). Use four BLACK 1-3/16" FLAT HEAD SCREWS (17).


NOTE: Be sure the WOOD DOWELS in the LARGE DRAWER BACK inserts into the holes in the LARGE DRAWER SIDES.

2

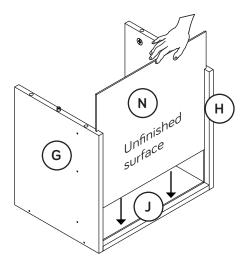


Slide a DRAWER BOTTOM (N) into the grooves in the LARGE DRAWER SIDES (G and H) and LARGE DRAWER BACK (J).

3

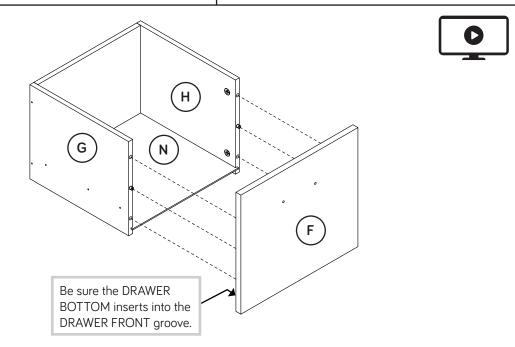


- Fasten the LARGE DRAWER FRONT (F) to the LARGE DRAWER SIDES (G and H). Tighten four HIDDEN CAMS.
- NOTE: Be sure the DRAWER BOTTOM (N) inserts into the groove of the LARGE DRAWER FRONT (F).
- NOTE: Be sure the WOOD DOWELS in the LARGE DRAWER SIDES insert into the LARGE DRAWER FRONT.

- Fasten a PULL (14) to the LARGE DRAWER FRONT (F). Use two BLACK 13/16" MACHINE SCREWS (18).
- Fasten the EXTENSION SLIDES (2) to the LARGE DRAWER SIDES (G and H). Use six BLACK 1/2" FLAT HEAD SCREWS (19).

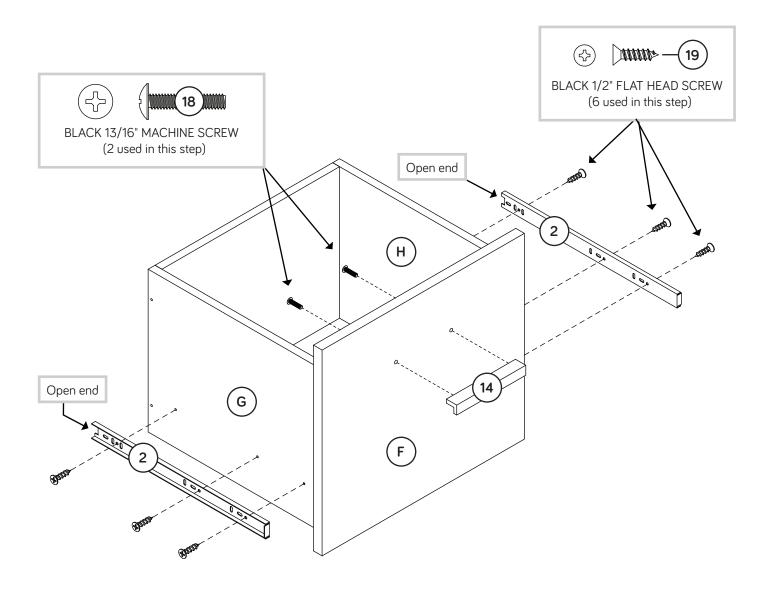


- Push two FILE GLIDES (13) onto the top edges of the LARGE DRAWER SIDES (G and H).
- NOTE: This drawer is designed to hold letter size hangers.



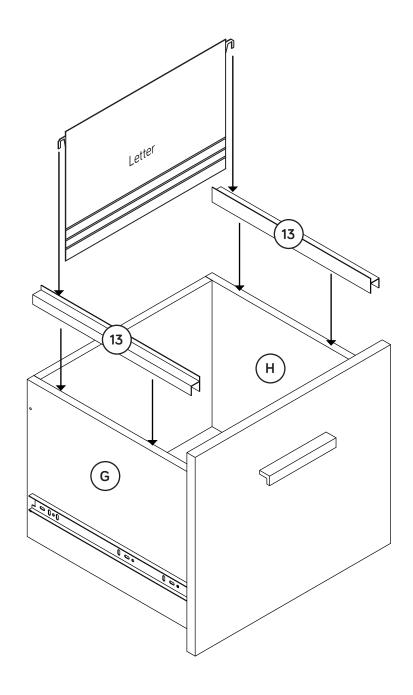

- To insert the small drawer into your unit, tip the front of the drawer down and drop the rollers on the drawer behind the rollers on the unit. Lift the front of the drawer up and slide it into the unit.
- To insert the large drawer into your unit, line up the EXTENSION SLIDES on the drawer with the EXTENSION RAILS on the unit and push the drawer into the unit until the drawer is fully inserted. The drawer will push in hard until it is all the way in, then it will slide in and out easier.
- ₹ Peel APPLIQUES from the APPLIQUE CARD (12) and stick them onto each visible HIDDEN CAM.
- NOTE: Please read the back pages of the instruction booklet for important safety information.
- This completes assembly. Clean with a damp cloth. Wipe dry.

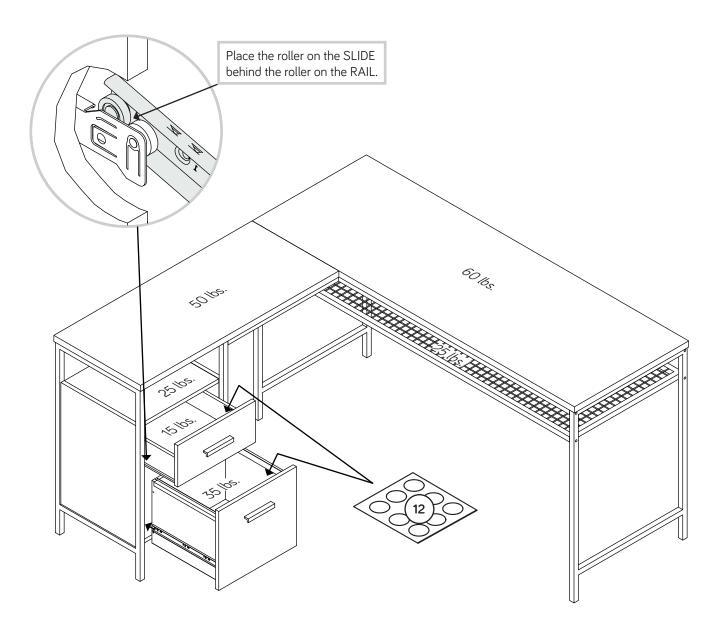

WARNING

Please use your furniture correctly and safely. Improper use can cause safety hazards, or damage to your furniture or household items. Carefully read the following chart.

Look out for:	What can happen:	How to avoid the problem:
 Overloaded shelves or drawers. Improper loading can cause the product to be top-heavy. 	 Risk of injury. Top-heavy furniture can tip over. Overloaded shelves and drawers can break. 	 Never exceed the weight limits shown in the instructions. Work from bottom to top when loading shelves and drawers. Place the heavier items on the lower shelves or in lower drawers.
Improperly moving furniture that is not designed and equipped with casters.	 Furniture can tip over or break if improperly moved. Physical injury. Furniture can be very heavy. Breakage of tops - particularly with double pedestal furniture (drawers at both ends). 	 Unload shelves and drawers from top to bottom before moving the unit. Do not push furniture, especially on a carpeted floor. Have a friend help you lift the item and set it in place. Provide support to the center section of the top when lifting the furniture.
Placing TVs on furniture items that are not designed to support a television is hazardous.	• Risk of injury or death. TVs can be very heavy. Plus the weight and location of the picture tube tends to make TVs unbalanced and prone to tipping forward.	This product is not designed to support a television.