

# Metro Desk

Model 5426463

 
**NOTE**: THIS INSTRUCTION BOOKLET CONTAINS <u>IMPORTANT</u> SAFETY INFORMATION.

PLEASE READ AND KEEP FOR FUTURE REFERENCE.

### **Table of Contents**

## Assembly Tools Required

Hardware Identification	2
Part Identification	3
Assembly Steps	4-9
Français	10-11
Español	12-13
Safety	14
Warranty	15



No. 2 Phillips Screwdriver Tip Shown Actual Size




Skip the power trip. This time.

#### Hardware Identification

 
F Screws are shown actual size. You may receive extra hardware with your unit.





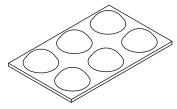

 (3) L-WRENCH - 1

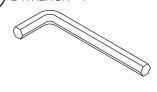

**4** ) WRENCH - 1



(5) 1" MACHINE SCREW - 4





(6) 1/2" PAN HEAD SCREW - 6





(7) 1/2" HEX HEAD SCREW - 14






## Part Identification




While not all parts are labeled, some of the parts will have a label or an inked letter on the edge to help distinguish similar parts from each other. Use this part identification to help identify similar parts.

Α	LEFT END (1)	
В	RIGHT END (1)	
С	FRAME (2)	
D	BRACE (4)	
Е	BACK BRACE (1)	
F	GLASS TOP (1)	
G	SHELF (1)	
	C D E	G C
		U


- Assemble your unit on a carpeted floor or on the empty carton to avoid scratching your unit or the floor.
- Fasten the BRACES (D) to one of the FRAMES (C).
  Tighten four 1/2" HEX HEAD SCREWS (7) using the L-WRENCH (3).

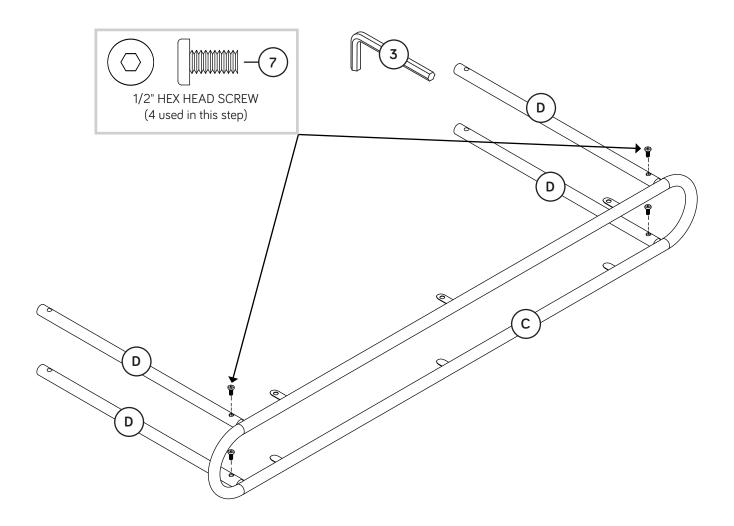


Fasten the remaining FRAME (C) to the BRACES (D). Tighten four 1/2" HEX HEAD SCREWS (7) using the L-WRENCH (3).

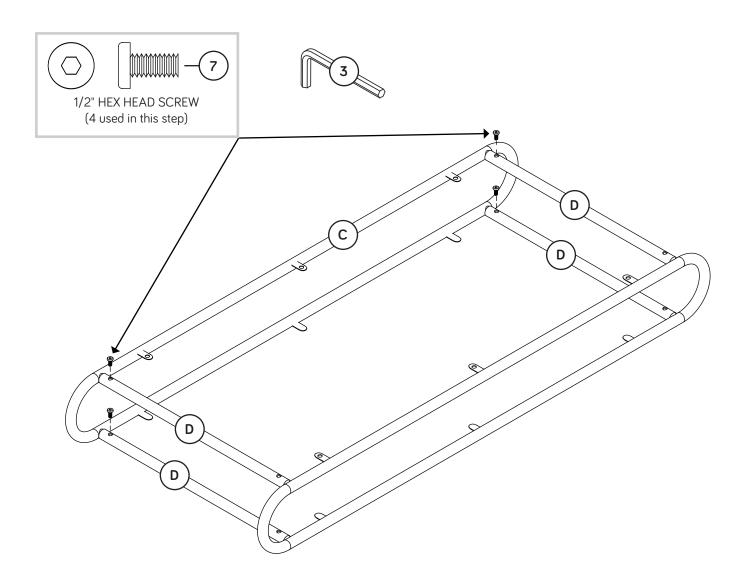


- Fasten the SHELF (G) to the FRAMES (C). Use six 1/2" PAN HEAD SCREWS (6).
- NOTE: You should start each SCREW a few turns before completely tightening any of them.

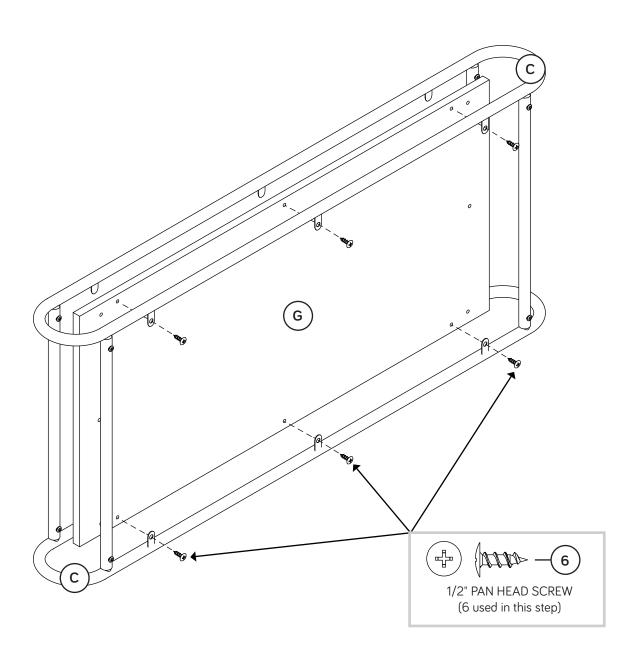


- Fasten the ENDS (A and B) to the SHELF (G). Tighten six 1/2" HEX HEAD SCREWS (7) using the L-WRENCH (3).
- NOTE: You should start each SCREW a few turns before completely tightening any of them.

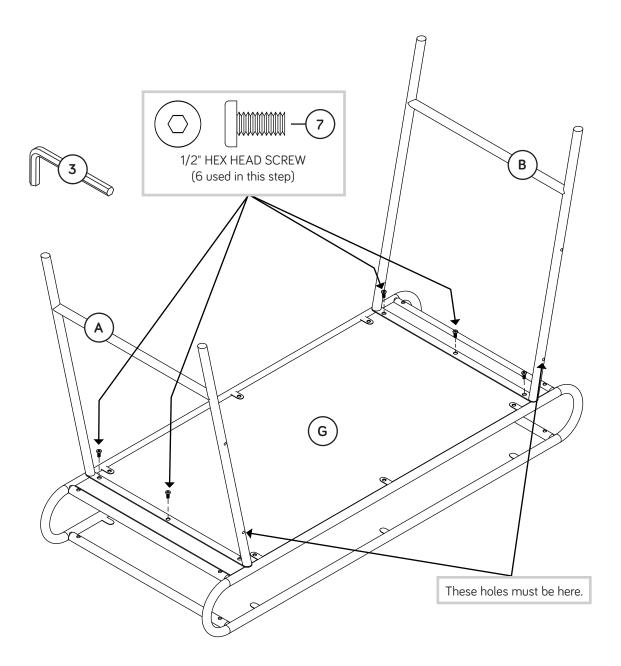

Fasten the BACK BRACE (E) to the ENDS (A and B).
Tighten four 1" MACHINE SCREWS (5) and four NUTS (1) using the WRENCH (4) and a screwdriver.

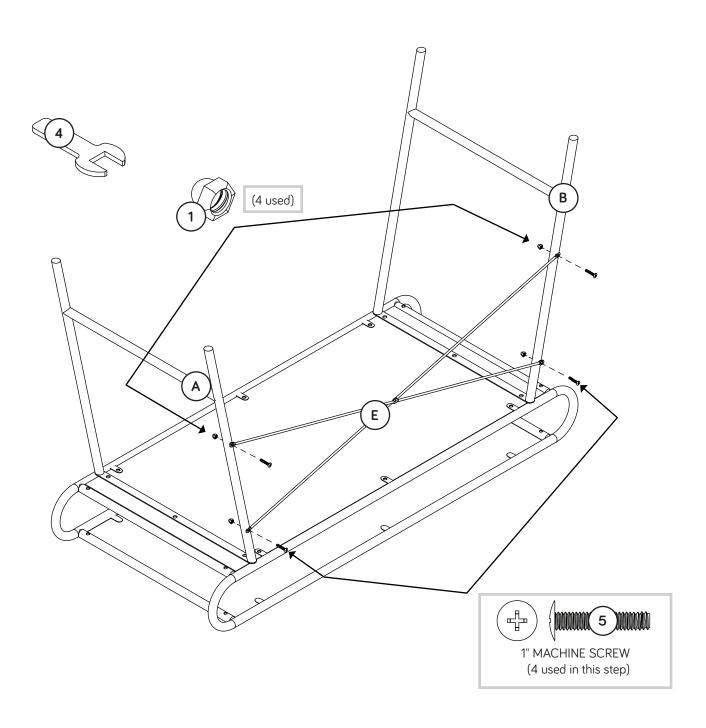

- Carefully stand your unit upright.
- Peel a GLASS SPACER (2) from the GLASS SPACER CARD (2) and stick them onto the tabs of the FRAMES (C).
- ▼ Place the GLASS TOP (F) with the shiny surface facing up onto the GLASS SPACERS.
- NOTE: Please read the back pages of the instruction booklet for important safety information.
- This completes assembly. Clean with a damp cloth. Wipe dry.

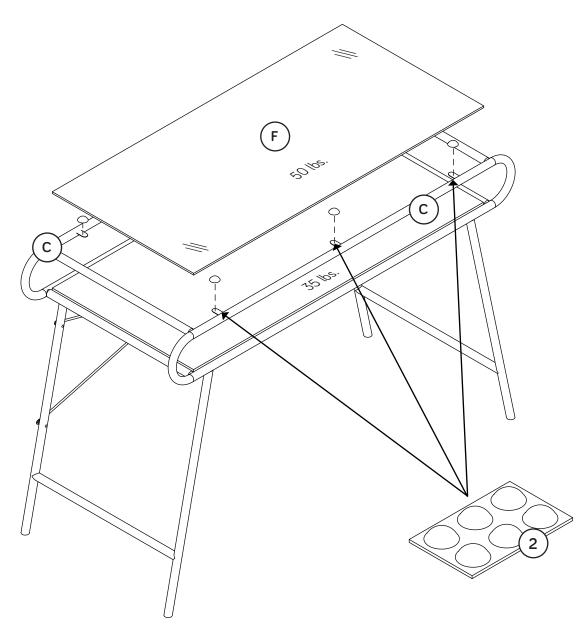

**▲ WARNING**Please use your furniture correctly and safely. Improper use can cause safety hazards, or damage to your furniture or household items. *Carefully read the following chart*.

Look out for:	What can happen:	How to avoid the problem:
Overloaded shelves.	<ul><li>Risk of injury.</li><li>Top-heavy furniture can tip over.</li><li>Overloaded shelves can break.</li></ul>	<ul> <li>Never exceed the weight limits shown in the instructions.</li> <li>Work from bottom to top when loading shelves. Place the heavier items on the lower shelves.</li> </ul>
Placing TVs on furniture items that are not designed to support a television is hazardous.	Risk of injury or death. TVs can be very heavy. Plus the weight and location of the picture tube tends to make TVs unbalanced and prone to tipping forward.	This product is not designed to support a television.