
www.teknikoffice.co.uk

## Teknik

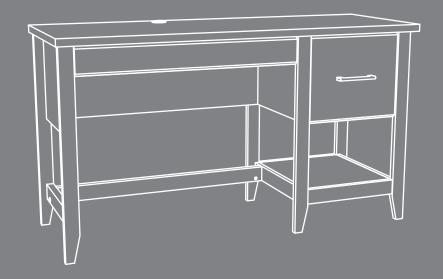

The original **desktop**.

# Summit Desk


Model 5425015

#### Table of Contents


#### Assembly Tools Required

Part Identification	3	No. 2 Phillips Screwdriver
Hardware Identification	4-5	Tip Shown Actual Size
Assembly Steps	6-28	Hammer
Français	29-32	Not actual size 🙂
Español	33-36	
Safety	37-38	
Warranty	39	

While not all parts are labeled, some of the parts will have a label or an inked letter on the edge to help distinguish similar parts from each other. Use this part identification to help identify similar parts.

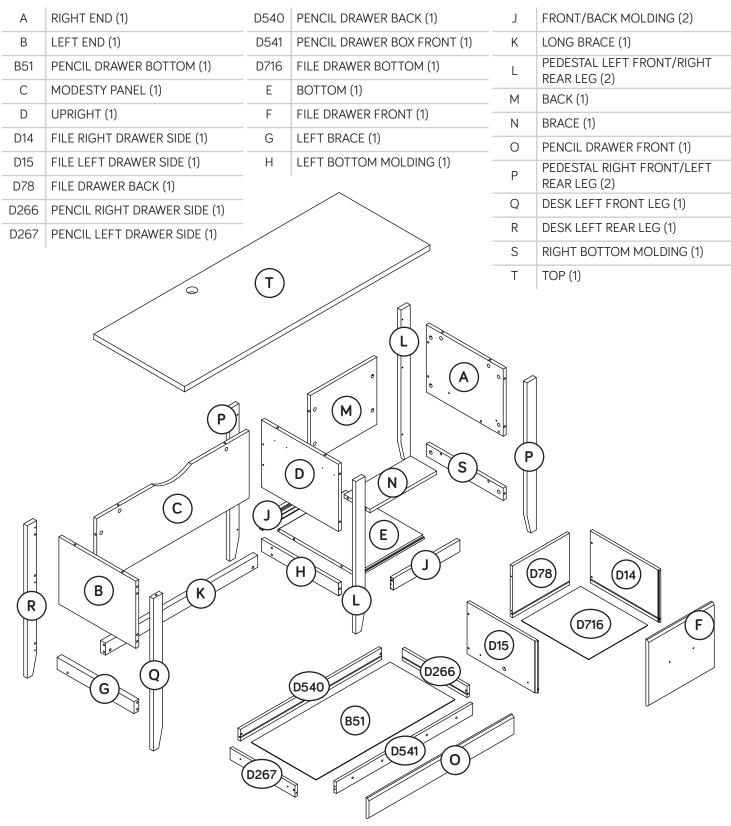



#### Hardware Identification

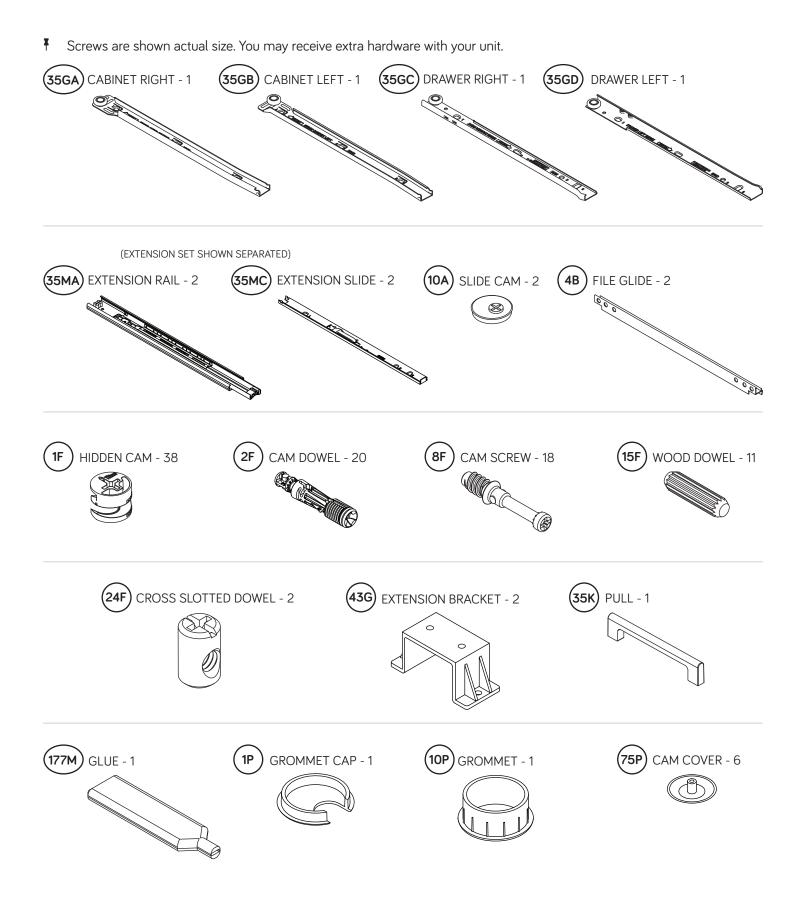


Page 4


F Screws are shown actual size. You may receive extra hardware with your unit.

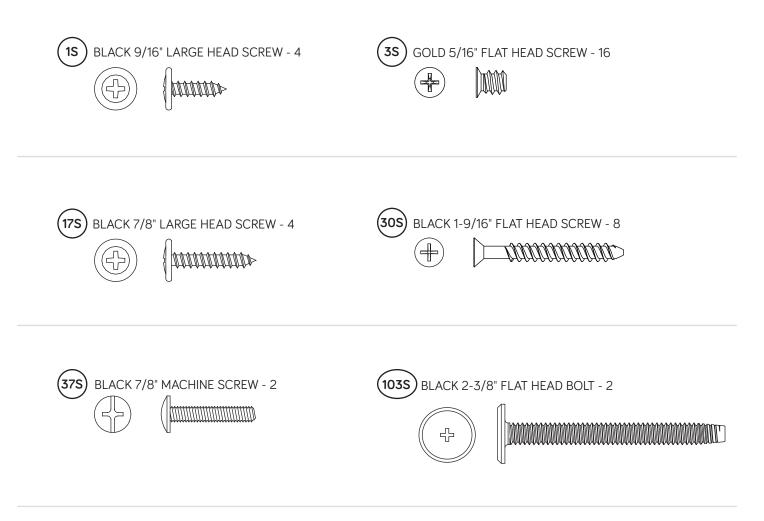

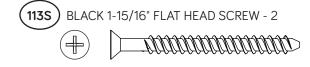



- Assemble your unit on a carpeted floor or on the empty carton to avoid scratching your unit or the floor.
- Push twenty HIDDEN CAMS (1F) into the ENDS (A and B), MODESTY PANEL (C), UPRIGHT (D), BOTTOM (E), BACK (M), and BRACE (N). Then, insert the metal end of a CAM DOWEL (2F) into each HIDDEN CAM.

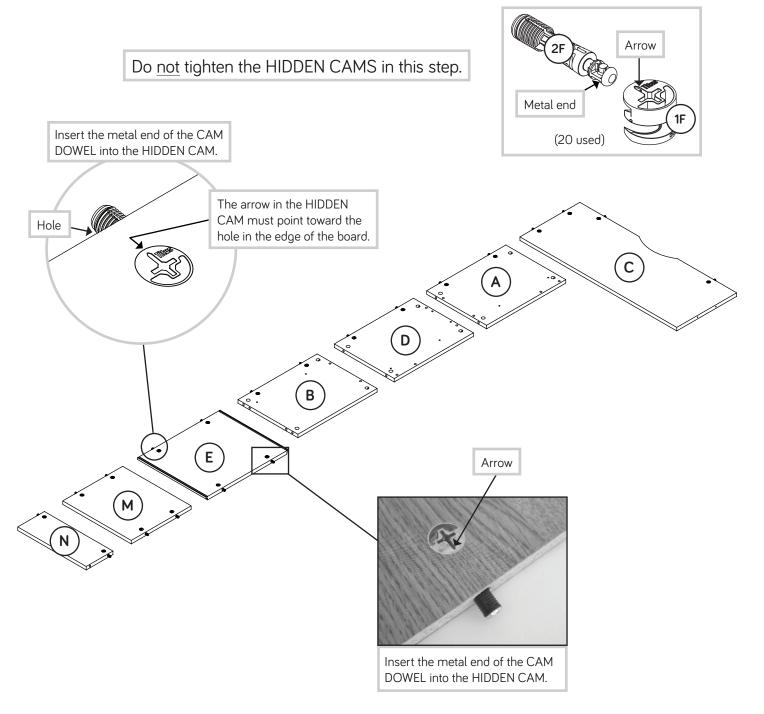


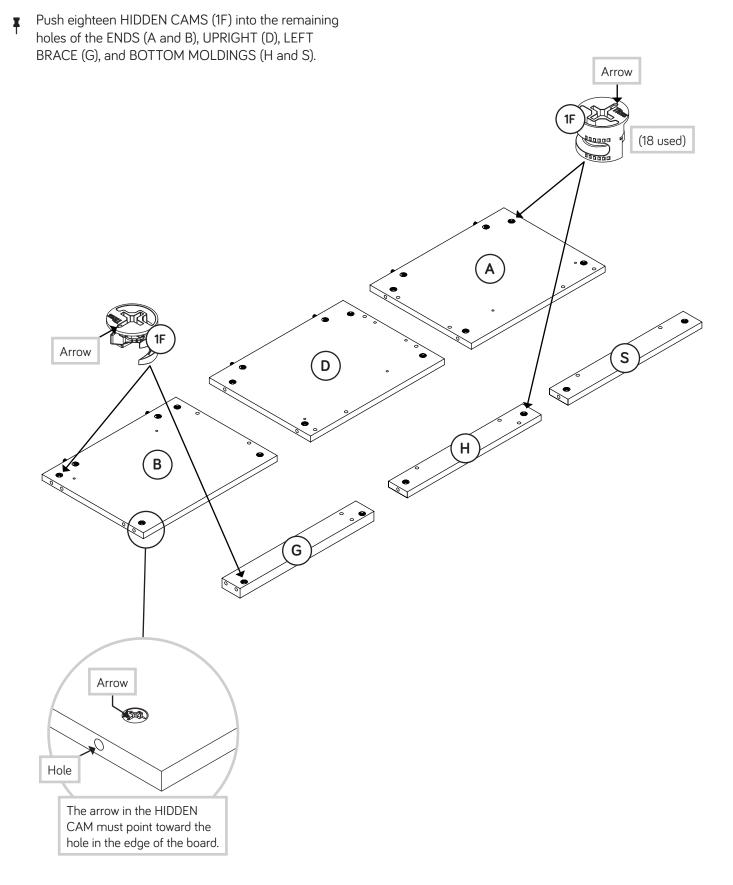


- Turn eighteen CAM SCREWS (8F) into the LEGS (L, P, Q, and R).
- First, fill the hole in the end of the LEG (Q) 1/4 to 1/2 full with GLUE (177M). Then, insert the WOOD DOWEL (15F) into the hole.
   Wipe away the excess GLUE.

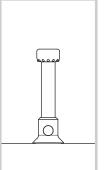


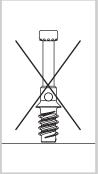


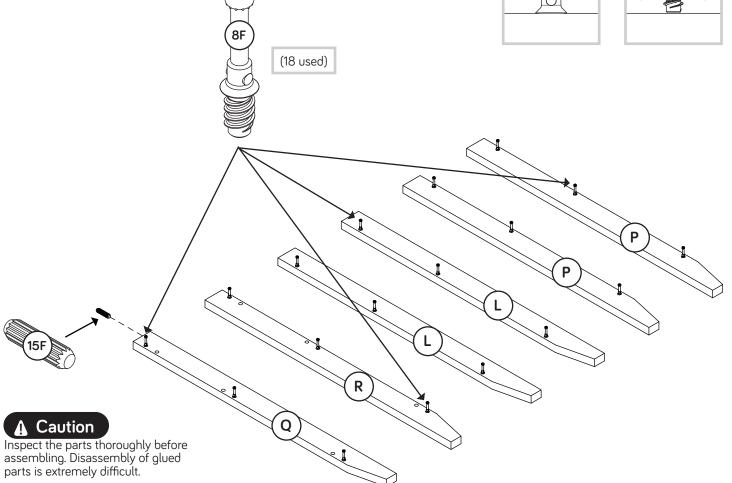

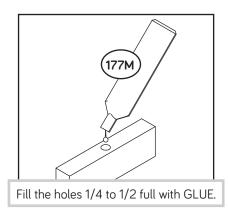


- First, fill the holes in the LEGS (Q and R) 1/4 to 1/2 full with GLUE (177M). Then, insert the WOOD DOWELS (15F) into the holes. Wipe away the excess GLUE.
- Now, fill the holes in the LEFT END (B) and LEFT BRACE (G) 1/4 to 1/2 full with GLUE.
- Fasten the LEGS (Q and R) to the LEFT END (B) and LEFT BRACE (G). Tighten six HIDDEN CAMS. Wipe away the excess GLUE.
- NOTE: Be sure the WOOD DOWELS in the LEGS insert into the LEFT END and LEFT BRACE.

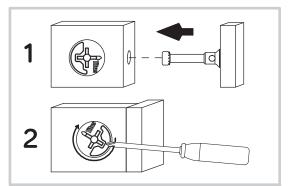


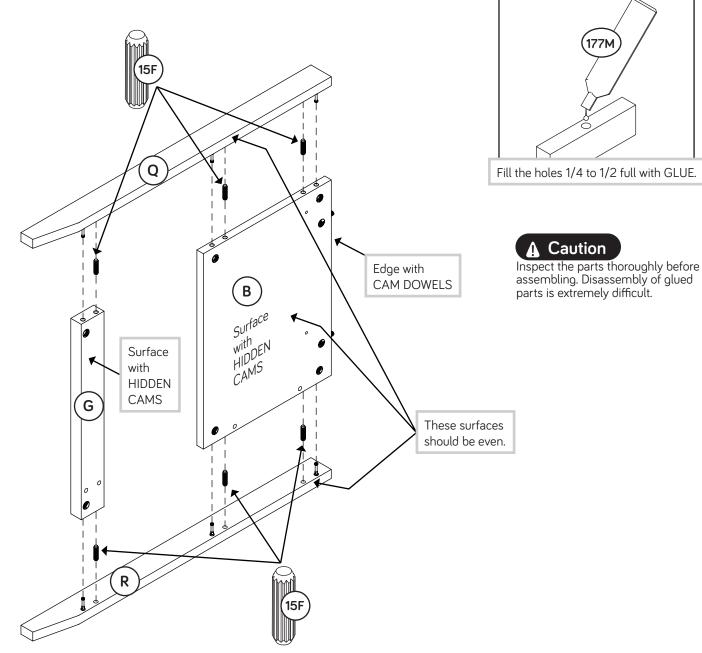


- Fasten the LEGS (L and P) to the RIGHT END (A) and RIGHT BOTTOM MOLDING (S). Tighten six HIDDEN CAMS.
- NOTE: Position the RIGHT BOTTOM MOLDING (S) exactly as shown.

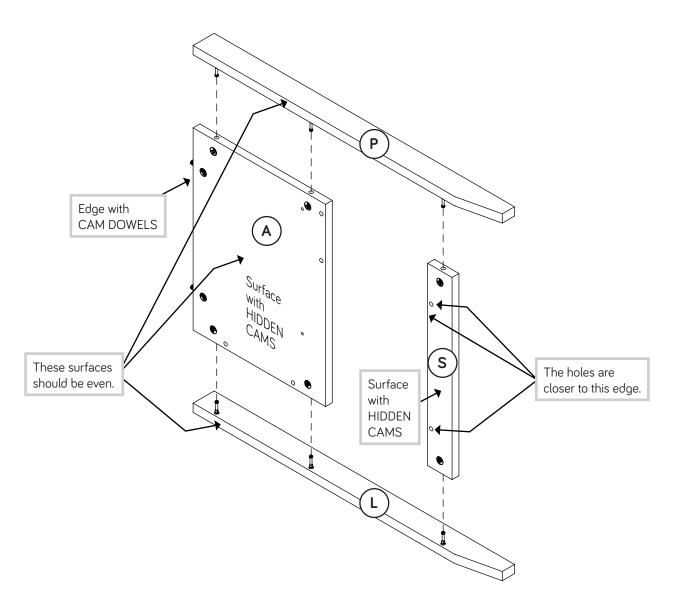


- Fasten the LEGS (L and P) to the UPRIGHT (D) and LEFT BOTTOM MOLDING (H). Tighten six HIDDEN CAMS.
- <u>NOTE</u>: Position the LEFT BOTTOM MOLDING (H) exactly as shown.

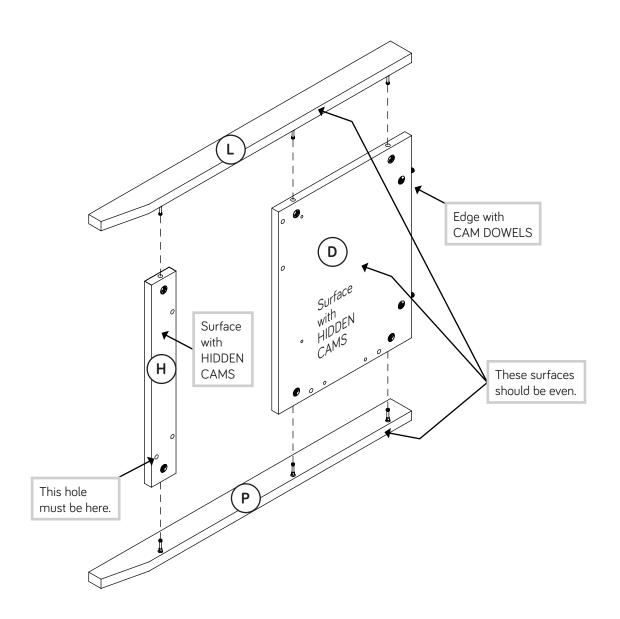


- Separate the EXTENSION SLIDES (35MC) from the EXTENSION RAILS (35MA) as shown in the upper diagram below. Be prepared, the parts are greasy.
- Fasten the EXTENSION RAILS (35MA) to the RIGHT END (A) and UPRIGHT (D). Use four GOLD 5/16" FLAT HEAD SCREWS (3S) through holes #1 and #3..
- NOTE: For each EXTENSION RAIL, turn a SCREW into the hole shown in the enlarged diagram. Then, slide the inner cartridge of the EXTENSION RAIL in to find the other hole that lines up with the hole in the END/UPRIGHT. Turn a SCREW into this hole.
- NOTE: The EXTENSION SLIDES (35MC) will be used later for the FILE DRAWER.

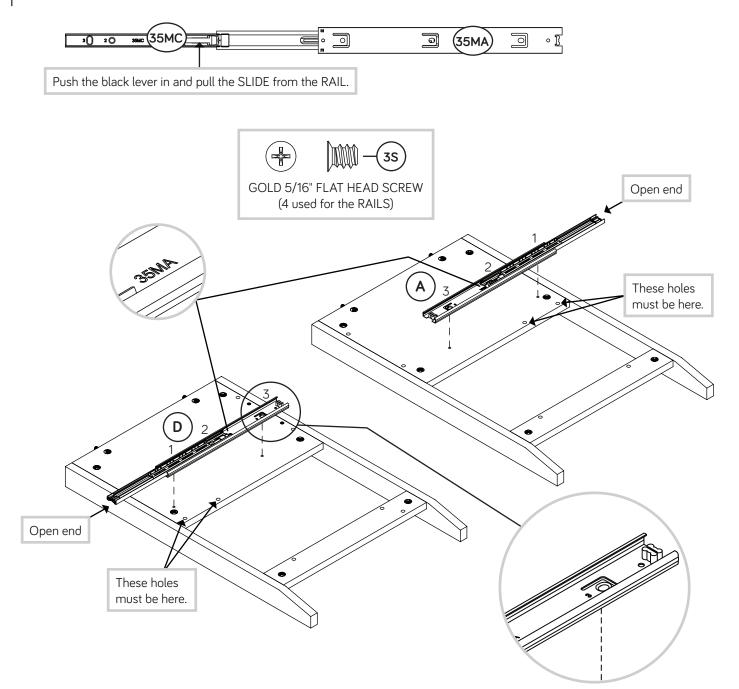


- Carefully flip the UPRIGHT (D) over.
- Fasten two EXTENSION BRACKETS (43G) to the UPRIGHT (D). Use four BLACK 9/16" LARGE HEAD SCREWS (1S).
- Fasten the CABINET RIGHT (35GA) to the EXTENSION BRACKETS (43G) on the UPRIGHT (D). Use two GOLD 5/16" FLAT HEAD SCREWS (3S) through holes #1 and #3.
- **NOTE**: Use the exact holes shown in the EXTENSION BRACKETS.
- Fasten the CABINET LEFT (35GB) to the LEFT END (B). Use two GOLD 5/16" FLAT HEAD SCREWS (3S) through holes #1 and #3.

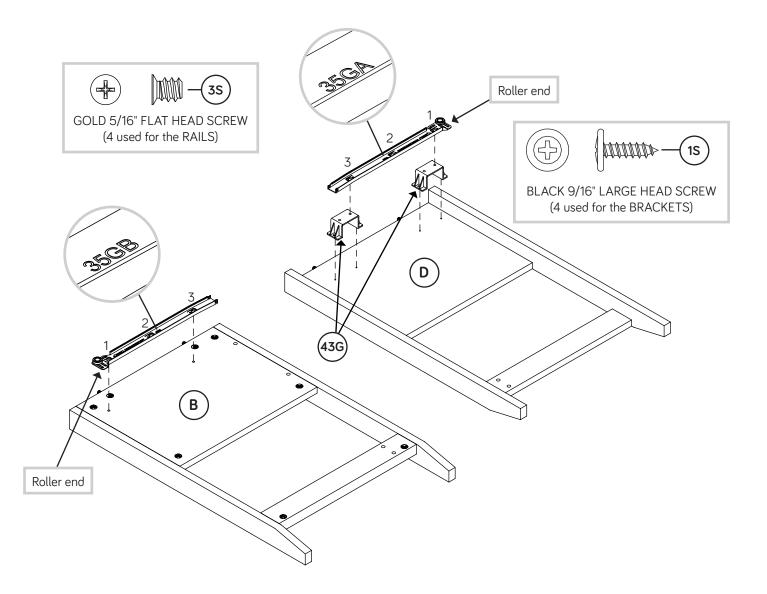



Fasten the MODESTY PANEL (C) to the LEFT END (B). Tighten two HIDDEN CAMS.

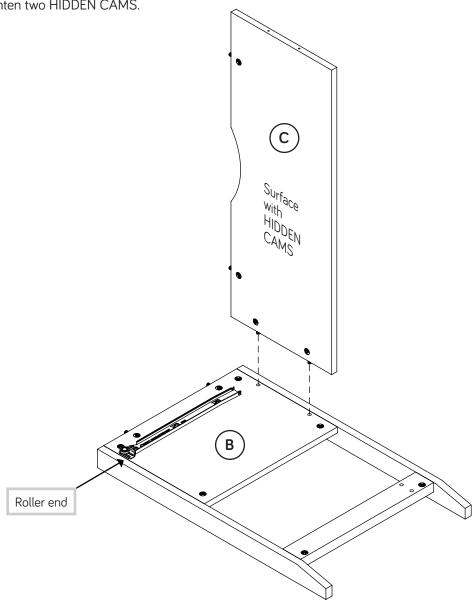

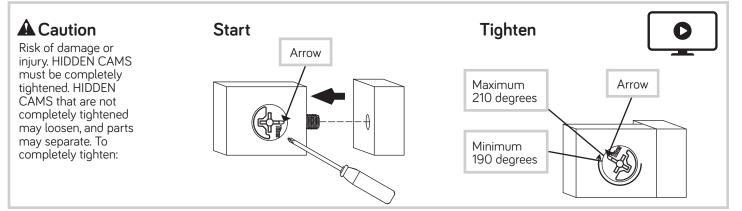


- First, fill the hole in the TOP (T) 1/4 to 1/2 full with GLUE (177M).
- Then, fasten the LEFT END (B) and MODESTY PANEL (C) to the TOP (T). Tighten four HIDDEN CAMS.
- NOTE: Be sure the WOOD DOWEL in the LEG (Q) inserts into the TOP. Wipe away the excess GLUE.

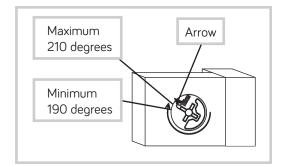

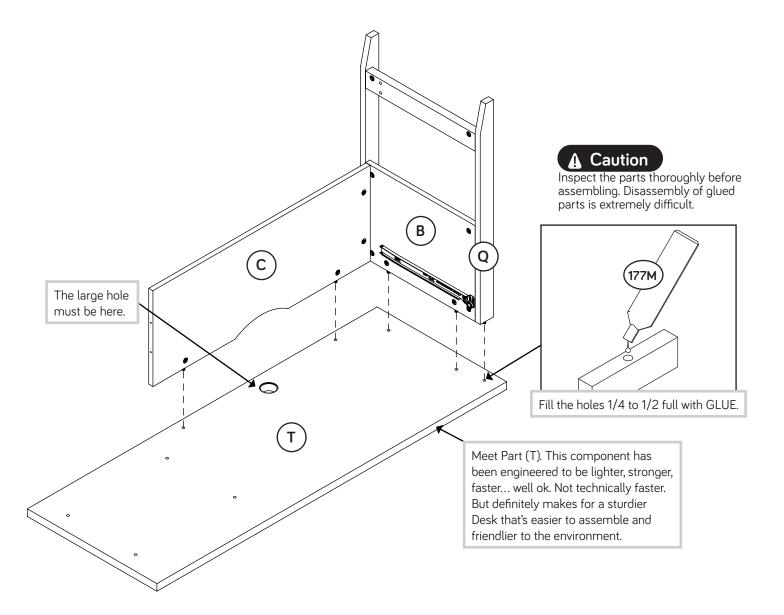


- Push two CROSS-SLOTTED DOWELS (24F) into the LONG BRACE (K) as shown.
- NOTE: The threads in the DOWEL should be pointed toward the hole in the edge of the LONG BRACE.
- First, fill the holes in the ends of the LONG BRACE (K) 1/4 to 1/2 full with GLUE (177M). Then, insert the WOOD DOWELS (15F) into the holes. Wipe away the excess GLUE.
- Now, fill the hole in the LEFT BRACE (G) 1/4 to 1/2 full with GLUE.
- Fasten the LONG BRACE (K) to the LEFT BRACE (G). Use one BLACK 2-3/8" FLAT HEAD BOLT (103S).
- <u>NOTE</u>: The BOLT will thread into the DOWEL in the LONG BRACE.
- NOTE: Be sure the WOOD DOWEL in the LONG BRACE inserts into the LEFT BRACE. Wipe away the excess GLUE.

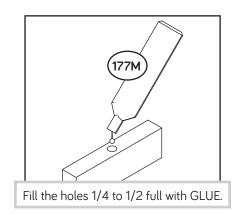

#### ▲ Caution


Inspect the parts thoroughly before assembling. Disassembly of glued parts is extremely difficult.

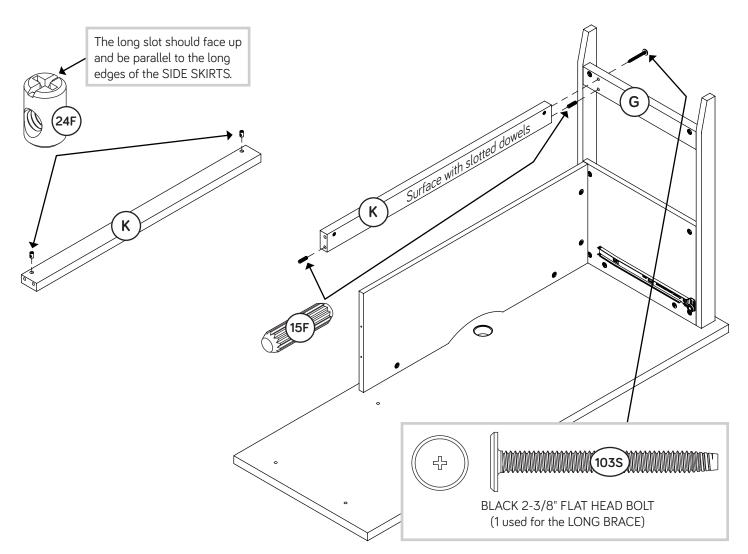



(+)

- First, fill the hole in the LEFT BOTTOM MOLDING (H) 1/4 to 1/2 full with GLUE.
- Next, fasten the UPRIGHT (D) to the TOP (T). Tighten two HIDDEN CAMS.
- NOTE: Be sure the WOOD DOWEL in the LONG BRACE (K) inserts into the LEFT BOTTOM MOLDING (H). Wipe away the excess GLUE.
- Fasten the LEFT BOTTOM MOLDING (H) to the LONG BRACE (K). Use one BLACK 2-3/8" FLAT HEAD BOLT (103S).
- Fasten the UPRIGHT (D) to the MODESTY PANEL (C). Use two BLACK 1-15/16" FLAT HEAD SCREWS (113S).


BLACK 1-15/16" FLAT HEAD SCREW

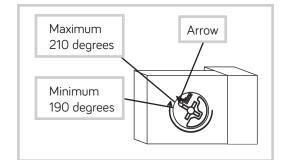


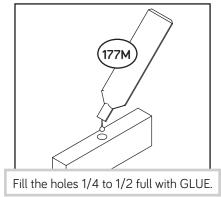

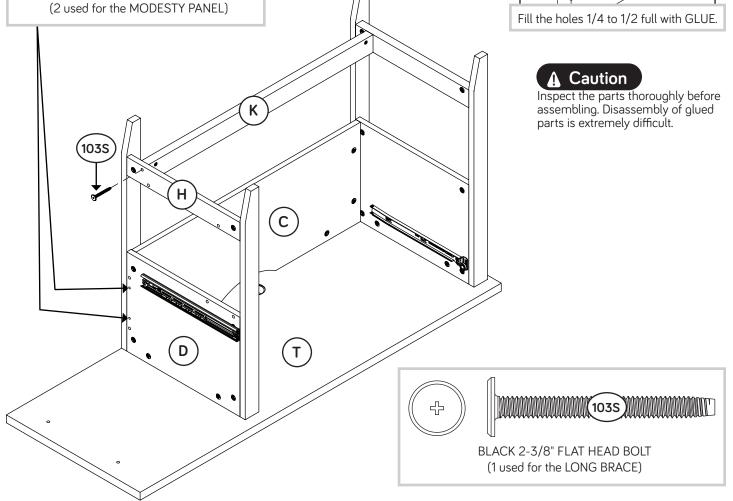


- First, fill the holes in the BRACE (N) 1/4 to 1/2 full with GLUE (177M). Then, insert the WOOD DOWELS (15F) into the holes. Wipe away the excess GLUE.
- Now, fill the hole in the UPRIGHT (D) 1/4 to 1/2 full with GLUE.
- Fasten the BRACE (N) to the UPRIGHT (D). Tighten one HIDDEN CAM.
- NOTE: Be sure the WOOD DOWEL in the BRACE inserts into the UPRIGHT. Wipe away the excess GLUE.
- Insert the CAM DOWELS in the edge of the BACK (M) into the UPRIGHT (D) but do <u>not</u> tighten them.

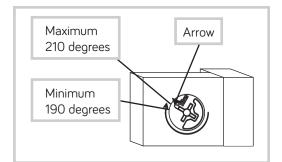


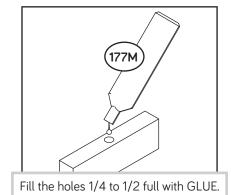





Inspect the parts thoroughly before assembling. Disassembly of glued parts is extremely difficult.

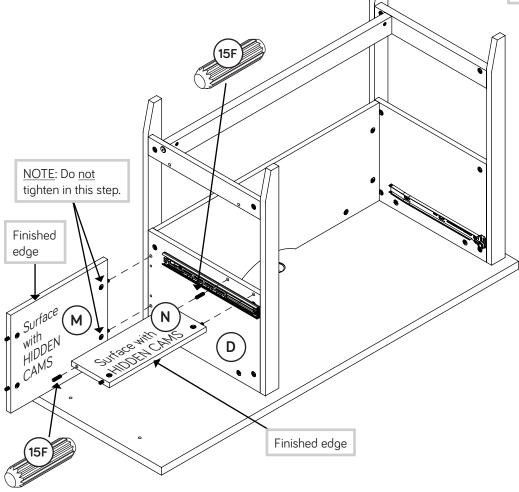

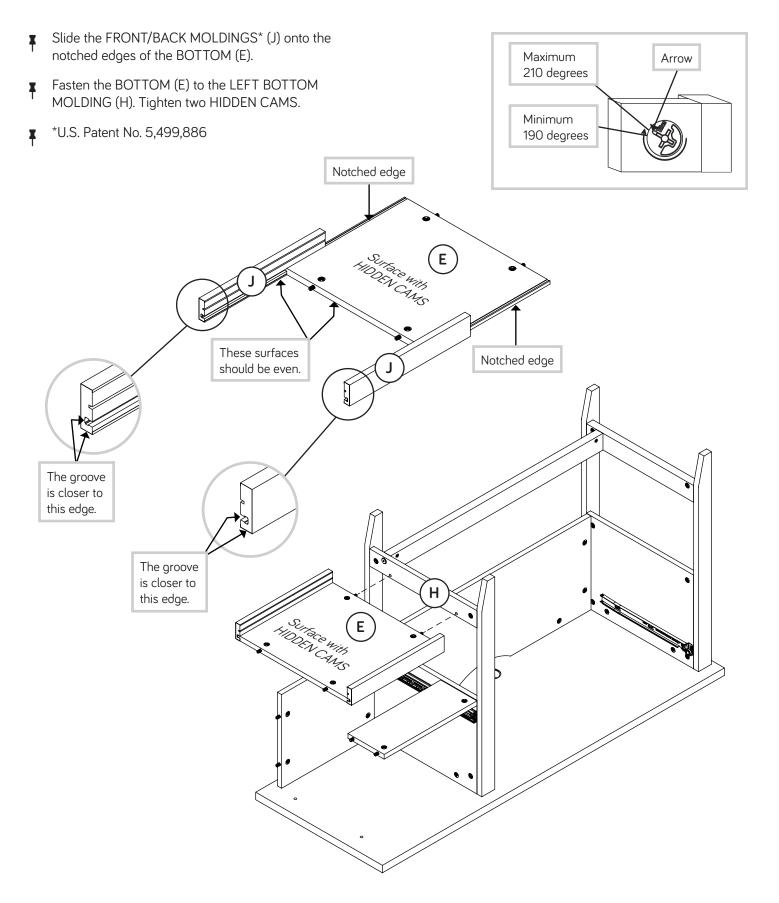


- First, fill the hole in the RIGHT END (A) 1/4 to 1/2 full with GLUE.
- Next, fasten the RIGHT END (A) to the BOTTOM (E), BACK (M), BRACE (N), and TOP (T). Tighten seven HIDDEN CAMS.
- NOTE: You may need to lift the BACK (M) up slightlyto align the holes.
- <u>NOTE</u>: Be sure the WOOD DOWEL in the BRACE (N) inserts into the RIGHT END (A). Wipe away the excess GLUE.
- Fasten the BACK (M) to the UPRIGHT (D). Tighten two HIDDEN CAMS.

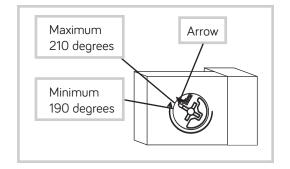


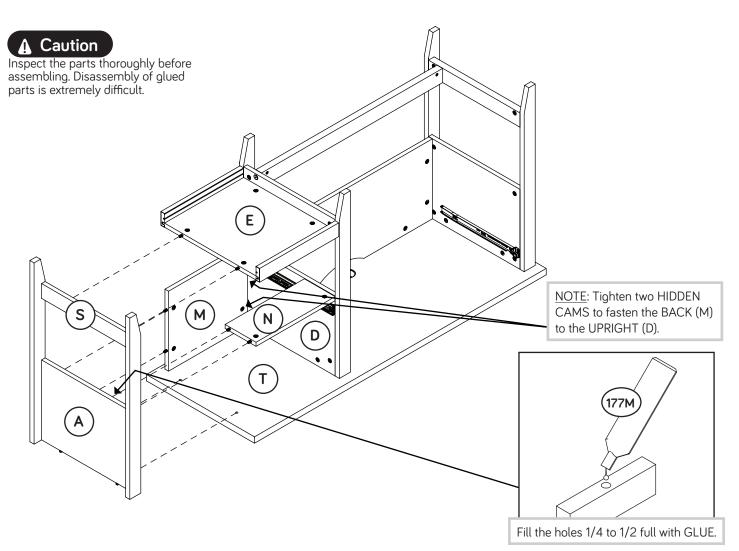


- Fasten the PENCIL DRAWER BACK (D540) to the PENCIL DRAWER SIDES (D266 and D267). Use two BLACK 1-9/16" FLAT HEAD SCREWS (30S).
- Slide the PENCIL DRAWER BOTTOM (B51) into the grooves in the PENCIL DRAWER SIDES (D266 and D267) and PENCIL DRAWER BACK (D540).
- Fasten the PENCIL DRAWER BOX FRONT (D541) to the PENCIL DRAWER SIDES (D266 and D267). Use two BLACK 1-9/16" FLAT HEAD SCREWS (30S).

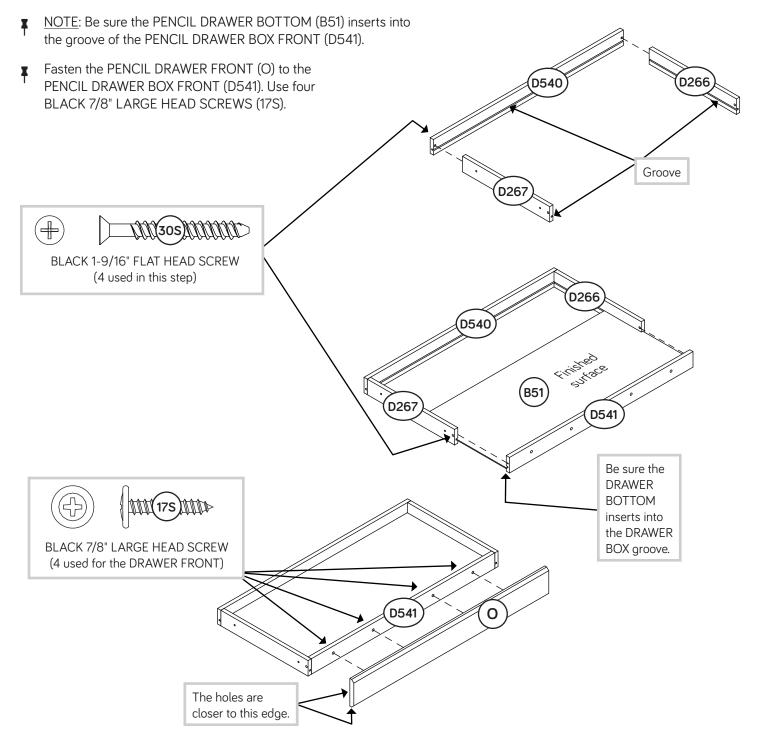


Fasten the DRAWER RIGHT (35GC) to the PENCIL RIGHT DRAWER SIDE (D266) and the DRAWER LEFT (35GD) to the PENCIL LEFT DRAWER SIDE (D267). Use four GOLD 5/16" FLAT HEAD SCREWS (3S) through holes #1 and #3.

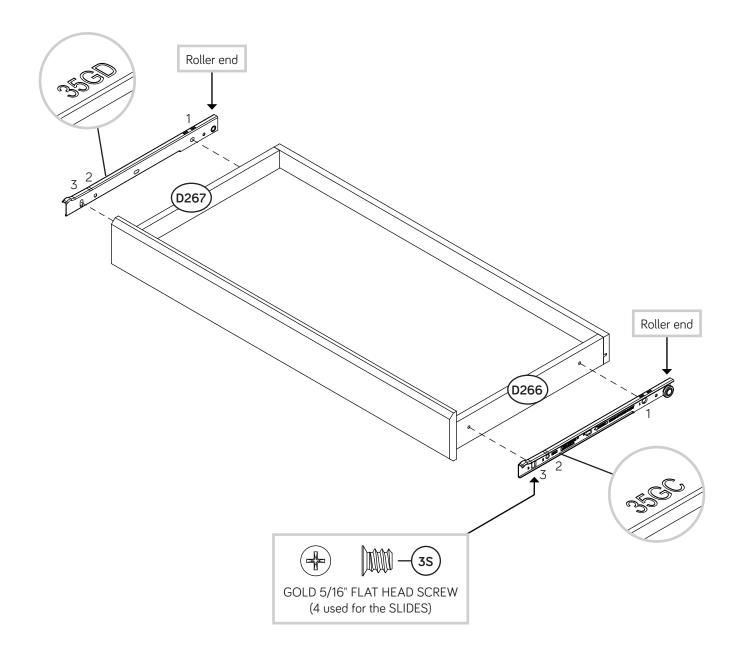

3

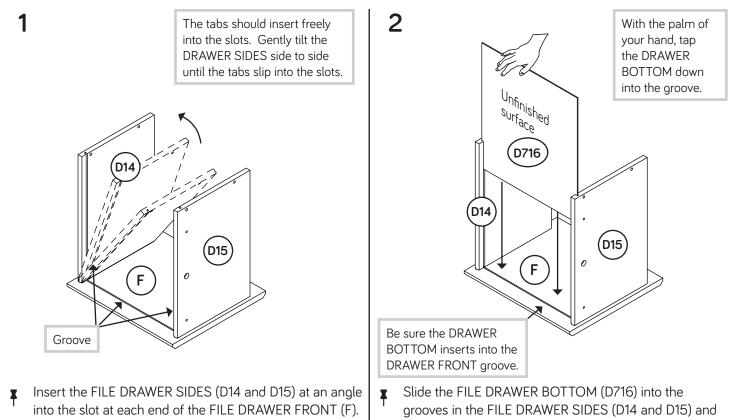


FILE DRAWER FRONT (F).

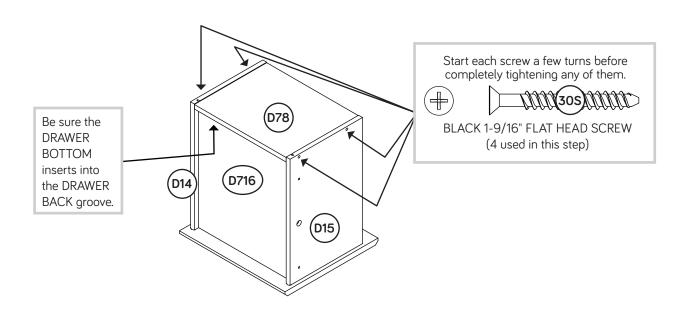


- Fasten the FILE DRAWER BACK (D78) to the FILE DRAWER SIDES (D14 and D15). Į Use four BLACK 1-9/16" FLAT HEAD SCREWS (30S).
- NOTE: Be sure the FILE DRAWER BOTTOM (D716) inserts into the groove of the Į FILE DRAWER BACK (D78).


- Insert a SLIDE CAM (10A) into the FILE DRAWER SIDES (D14 and D15).
- Fasten the EXTENSION SLIDES (35MC) to the FILE DRAWER SIDES (D14 and D15). Use four GOLD 5/16" FLAT HEAD SCREWS (3S) through holes #1 and #3.
- NOTE: The screw head in the CAM must be visible through the slotted hole in the SLIDE.
- Fasten the PULL (35K) to the FILE DRAWER FRONT (F). Use two BLACK 7/8" MACHINE SCREWS (37S).

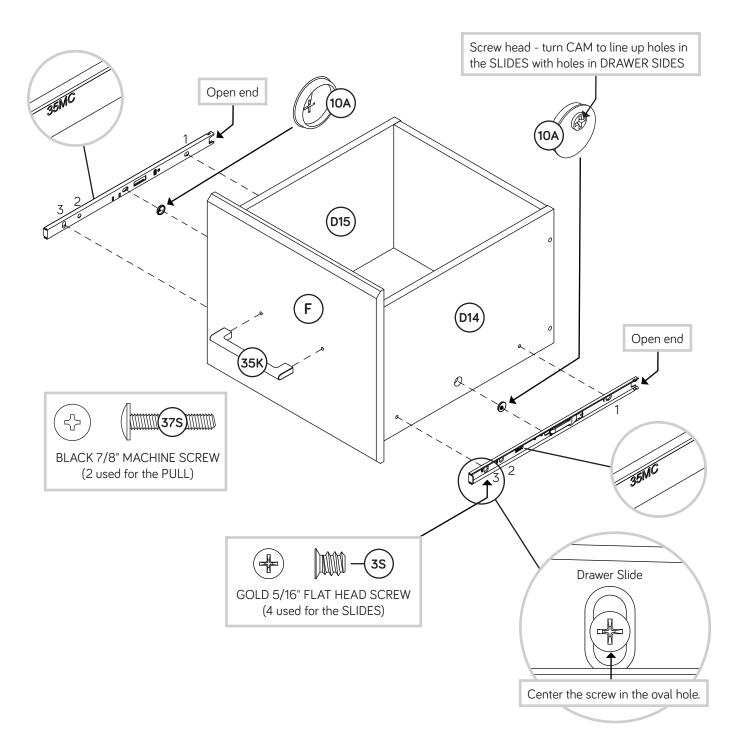


- Push the FILE GLIDES (4B) onto the FILE DRAWER SIDES (D14 and D15).
- Carefully stand your unit upright.
- To insert the PENCIL DRAWER (O) into your unit, tip the front of the drawer down and drop the rollers on the drawer behind the rollers on the unit. Lift the front of the drawer up and slide it into the unit.
- To insert the FILE DRAWER (F) into your unit, line up the EXTENSION SLIDES on the drawer with the EXTENSION RAILS on the unit and push the drawer into the unit until the drawer is fully inserted. The drawer will push in hard until it is all the way in, then it will slide in and out easier.

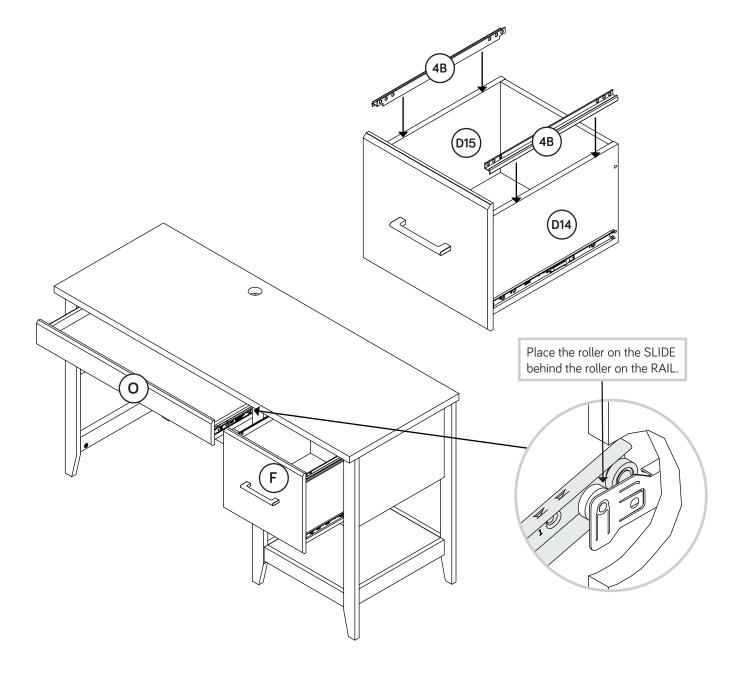


Insert the GROMMET (10P) and GROMMET CAP (1P) into the large hole in the TOP (T).

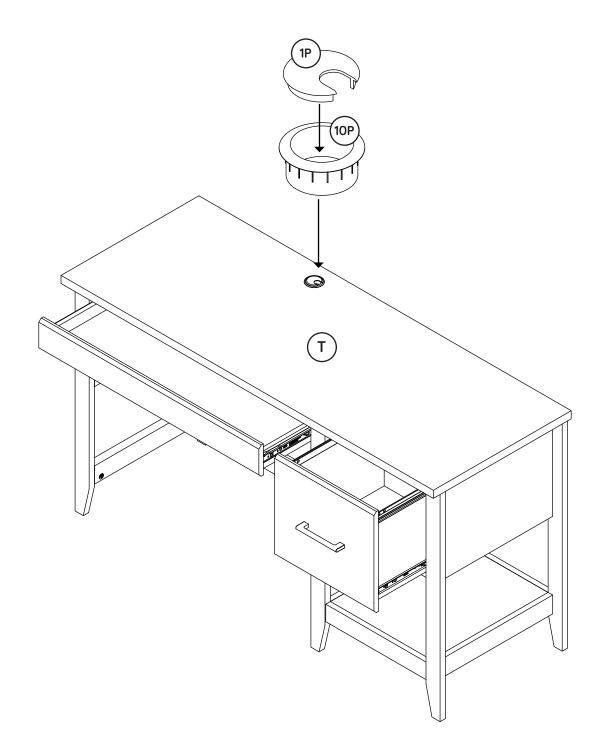


Using your hammer, gently tap a CAM COVER (75P) onto each visible HIDDEN CAM.

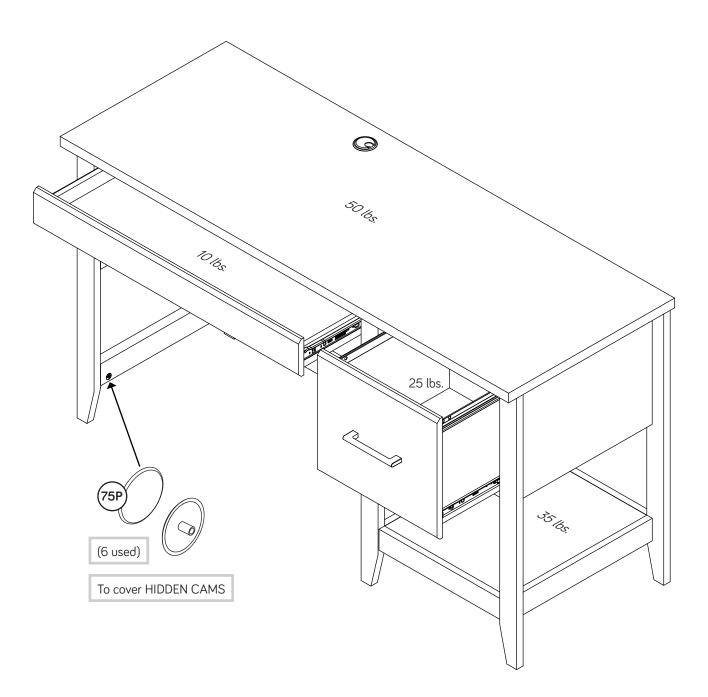

- To make adjustments to the drawer, loosen SCREW #3 in the SLIDES a 1/4 turn, then turn the cam clockwise or counter-clockwise. Notice how the drawer raises or lowers as you turn the cam. By adjusting the drawer this way, it will help the DRAWER FRONT line up better when closed. Tighten the SCREWS when finished with adjustments.
- NOTE: Please read the back pages of the instruction booklet for important safety information.
- This completes assembly. Clean with a damp cloth. Wipe dry.

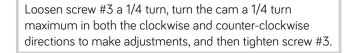

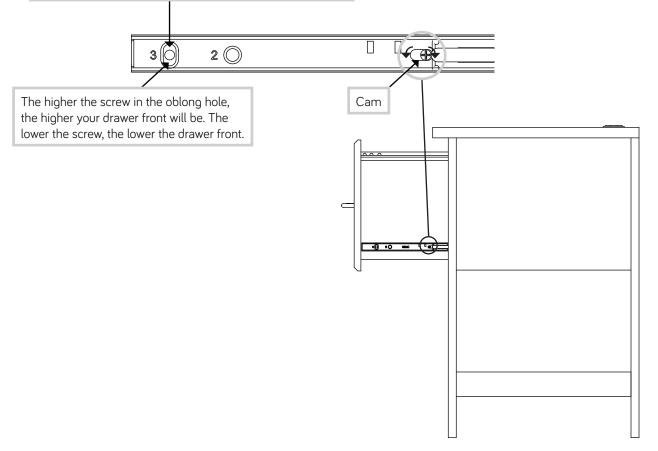

<b>WARNING</b> Please use your furniture correctly and safely. Improper use can cause safety hazards, or damage to your furniture or household items. <i>Carefully read the following chart.</i>				
Look out for:	What can happen:	How to avoid the problem:		
<ul> <li>Overloaded shelves or drawers.</li> <li>Improper loading can cause the product to be top-heavy.</li> </ul>	<ul> <li>Risk of injury.</li> <li>Top-heavy furniture can tip over.</li> <li>Overloaded shelves and drawers can break.</li> </ul>	<ul> <li>Never exceed the weight limits shown in the instructions.</li> <li>Work from bottom to top when loading shelves and drawers. Place the heavier items on the lower shelves or in lower drawers.</li> </ul>		
<ul> <li>Improperly moving furniture that is not designed and equipped with casters.</li> </ul>	<ul> <li>Furniture can tip over or break if improperly moved.</li> <li>Physical injury. Furniture can be very heavy.</li> <li>Breakage of tops - particularly with double pedestal furniture (drawers at both ends).</li> </ul>	<ul> <li>Unload shelves and drawers from top to bottom before moving the unit.</li> <li>Do not push furniture, especially on a carpeted floor. Have a friend help you lift the item and set it in place.</li> <li>Provide support to the center section of the top when lifting the furniture.</li> </ul>		
<ul> <li>Placing TVs on furniture items that are not designed to support a television is hazardous.</li> </ul>	• Risk of injury or death. TVs can be very heavy. Plus the weight and location of the picture tube tends to make TVs unbalanced and prone to tipping forward.	• This product is not designed to support a television.		