




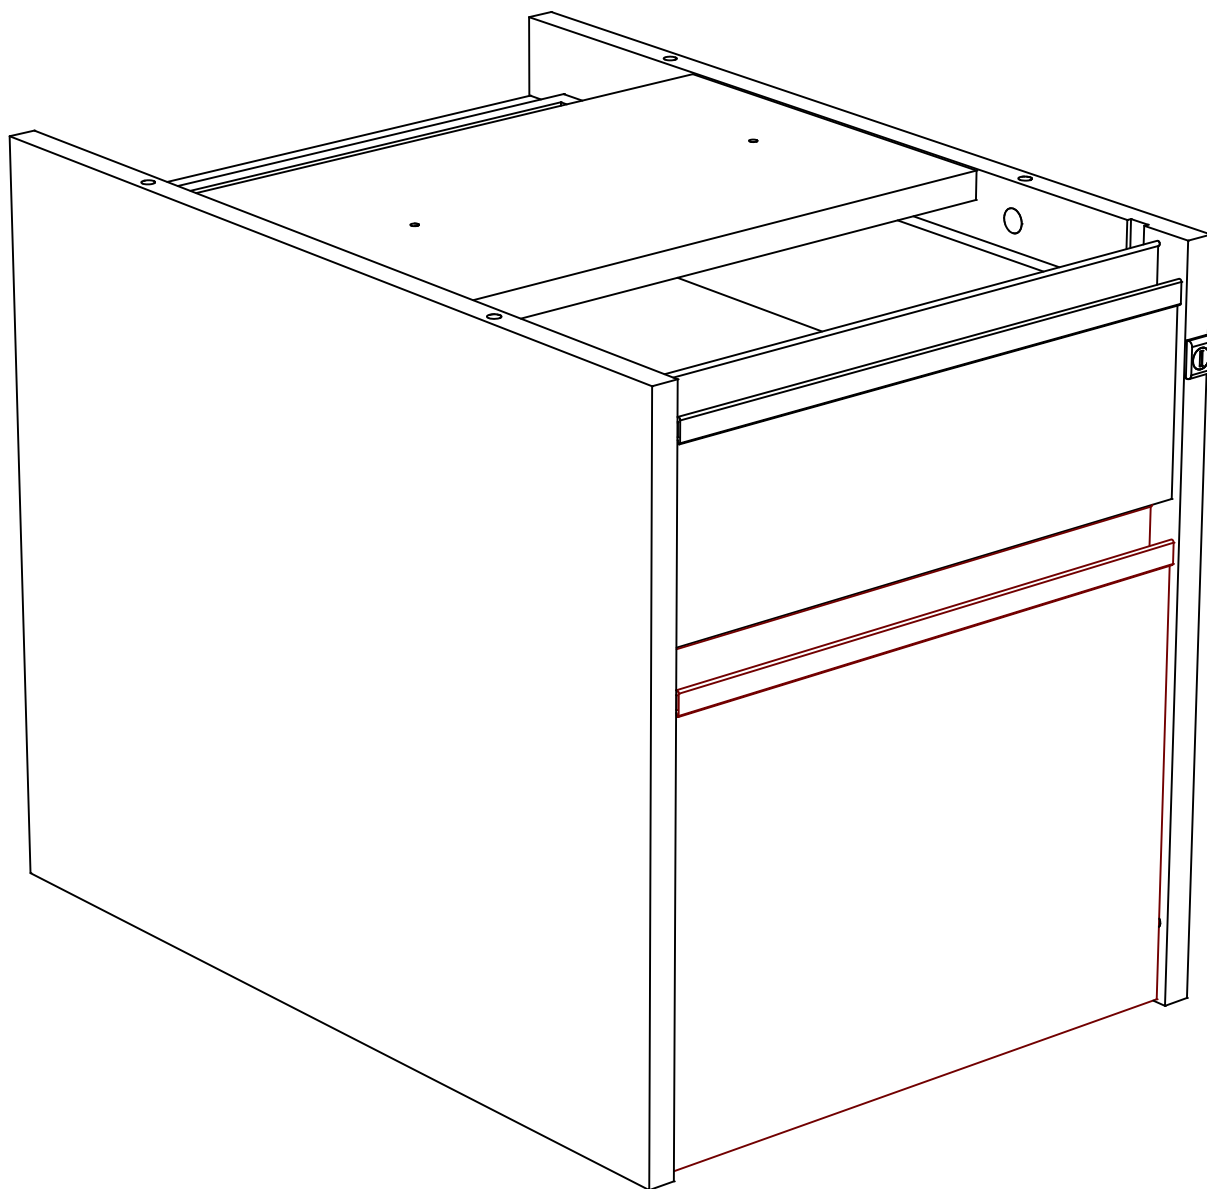
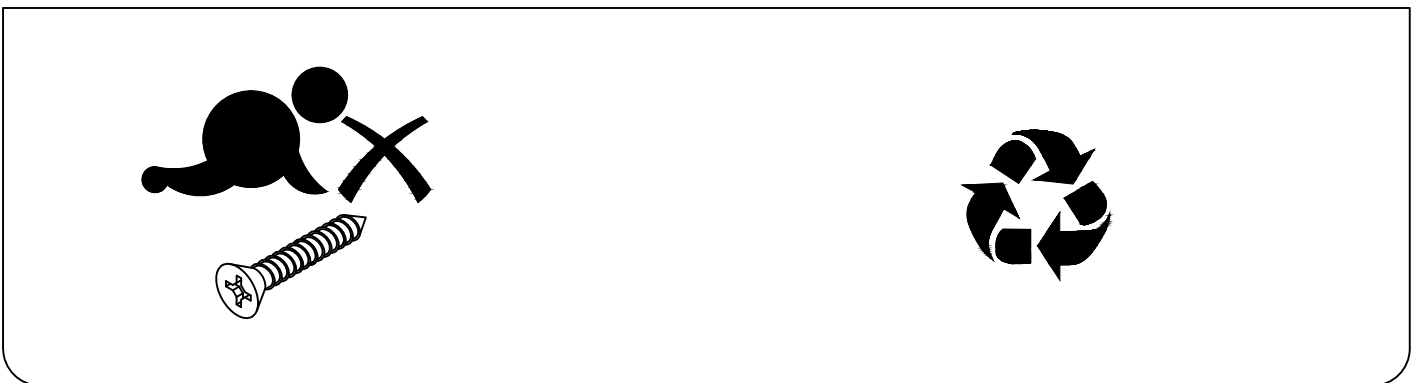


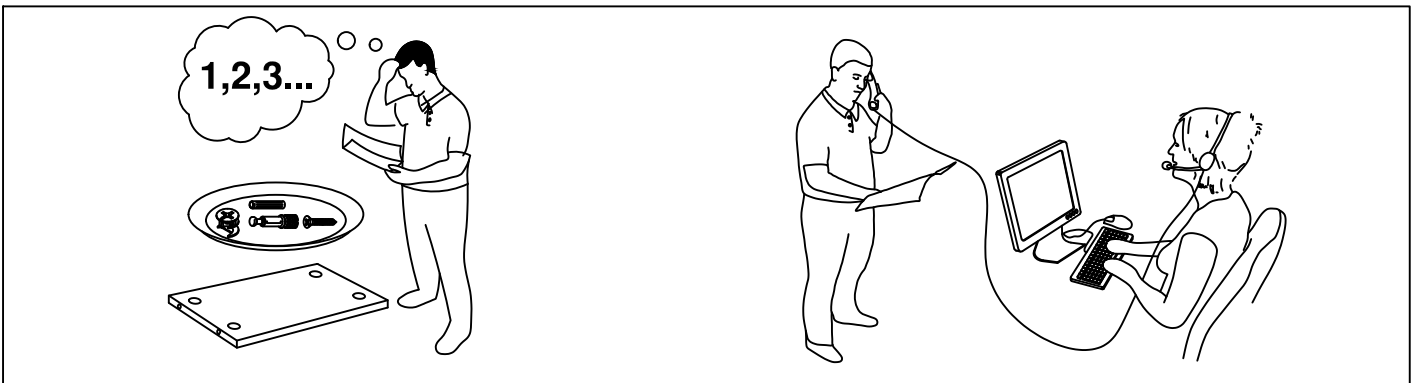

CF2FP - 2 Drw Desk Pedestal



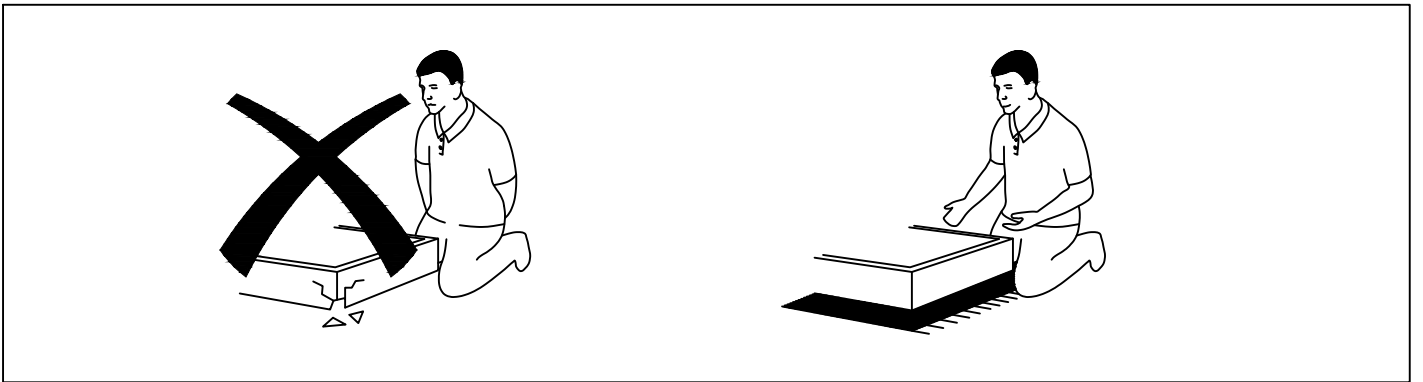


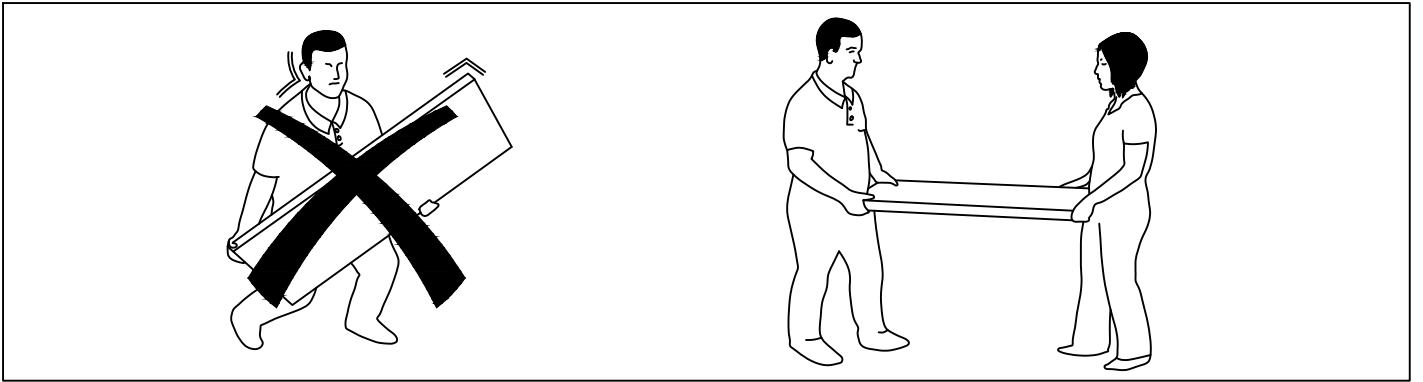

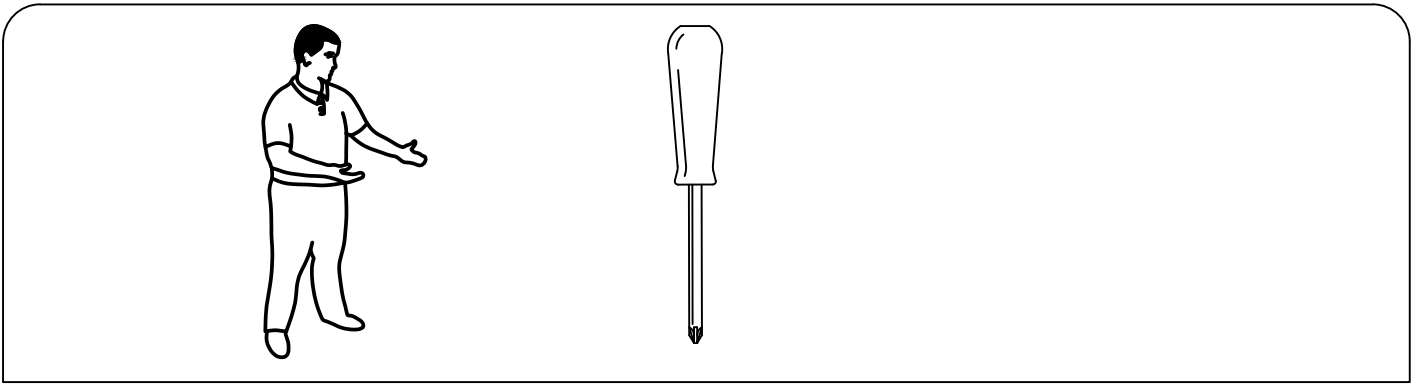

Please check that you have all the fittings

CF2FP

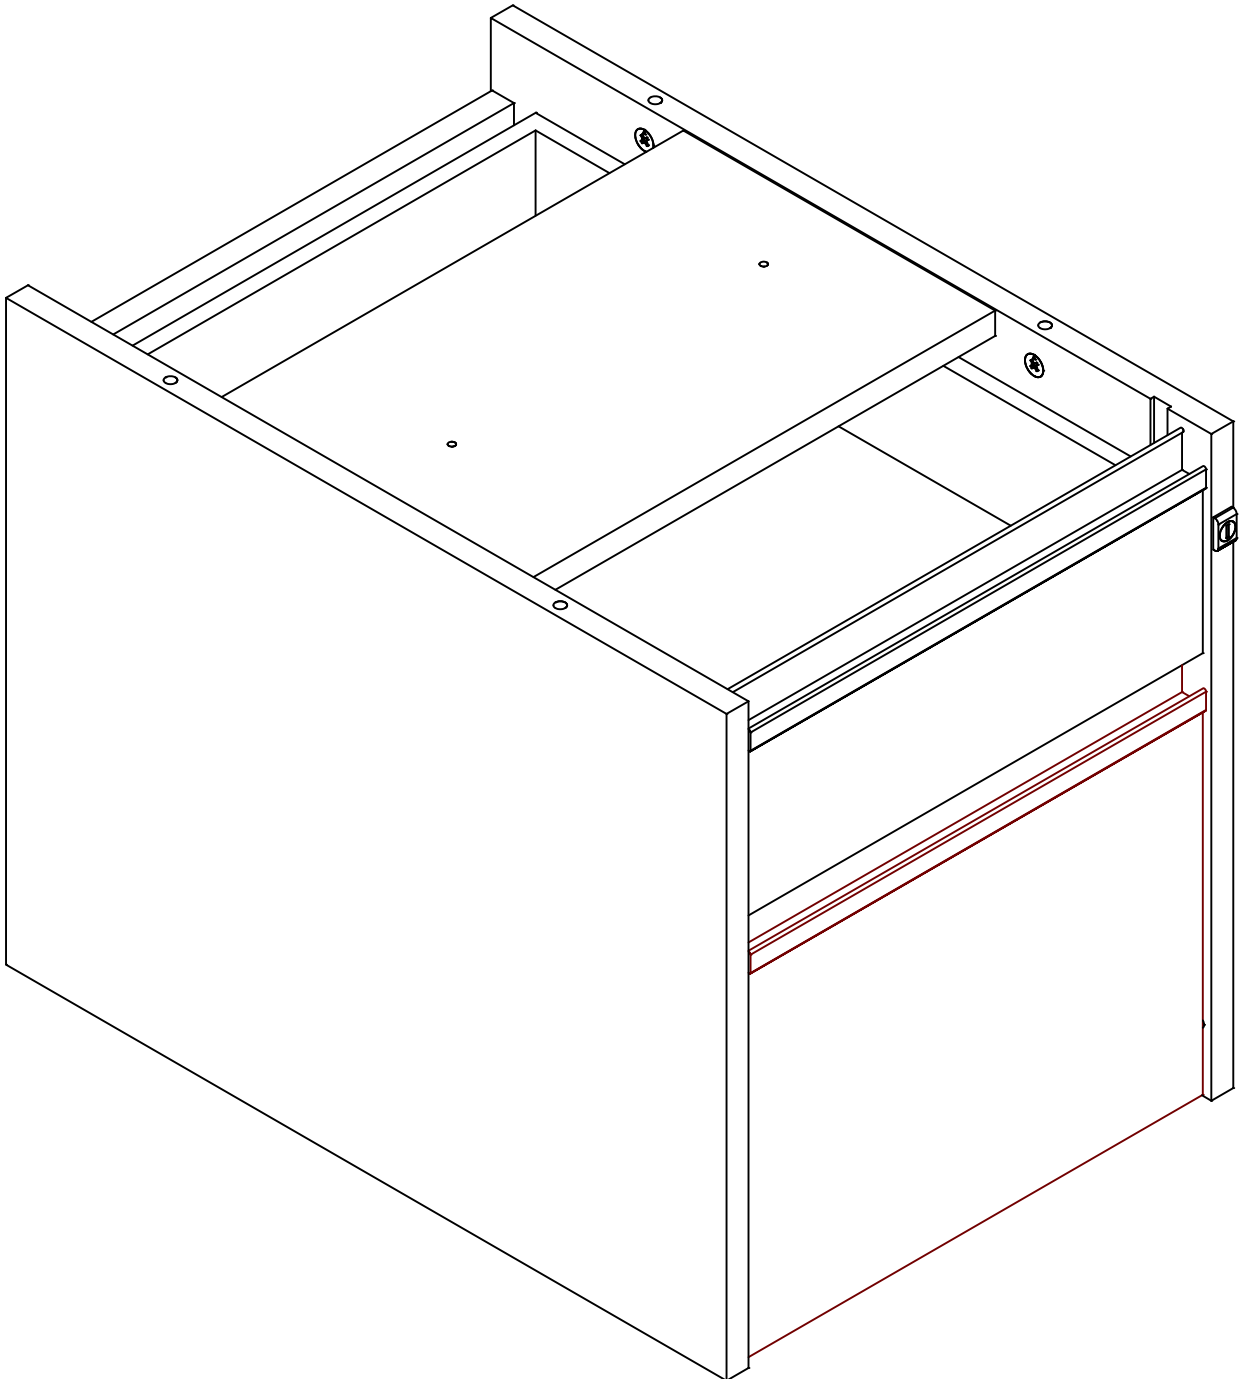

4

Minifix cam 15N
CAM03


4

Quickfix spread bolt
BLT06


4



1 1/4 x 8 screw
SCR12

1



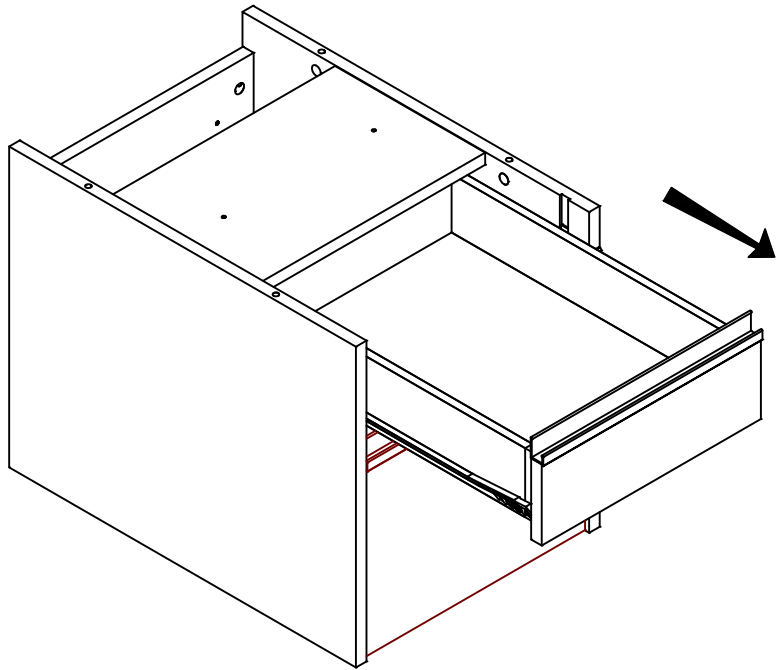


2


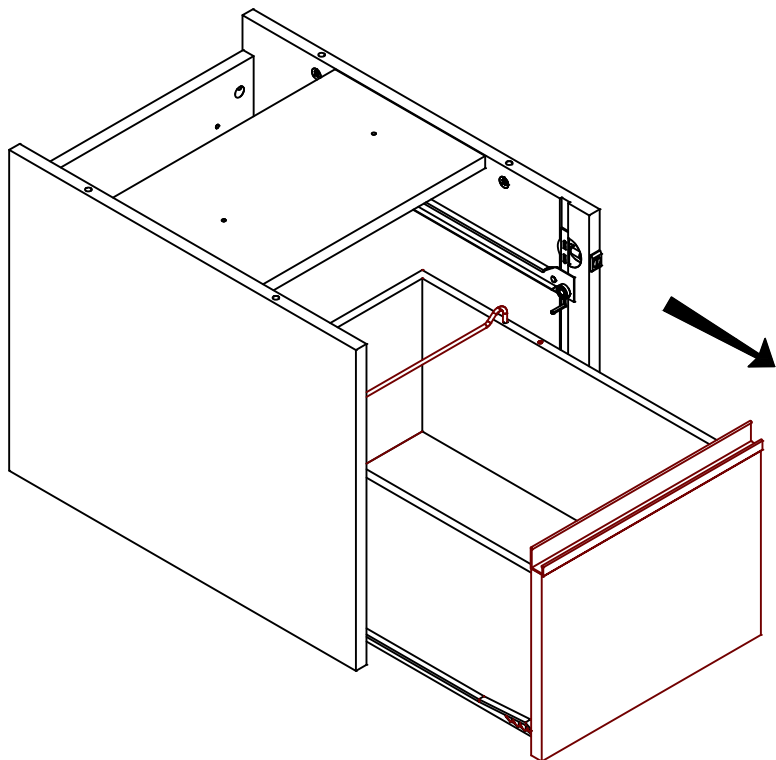


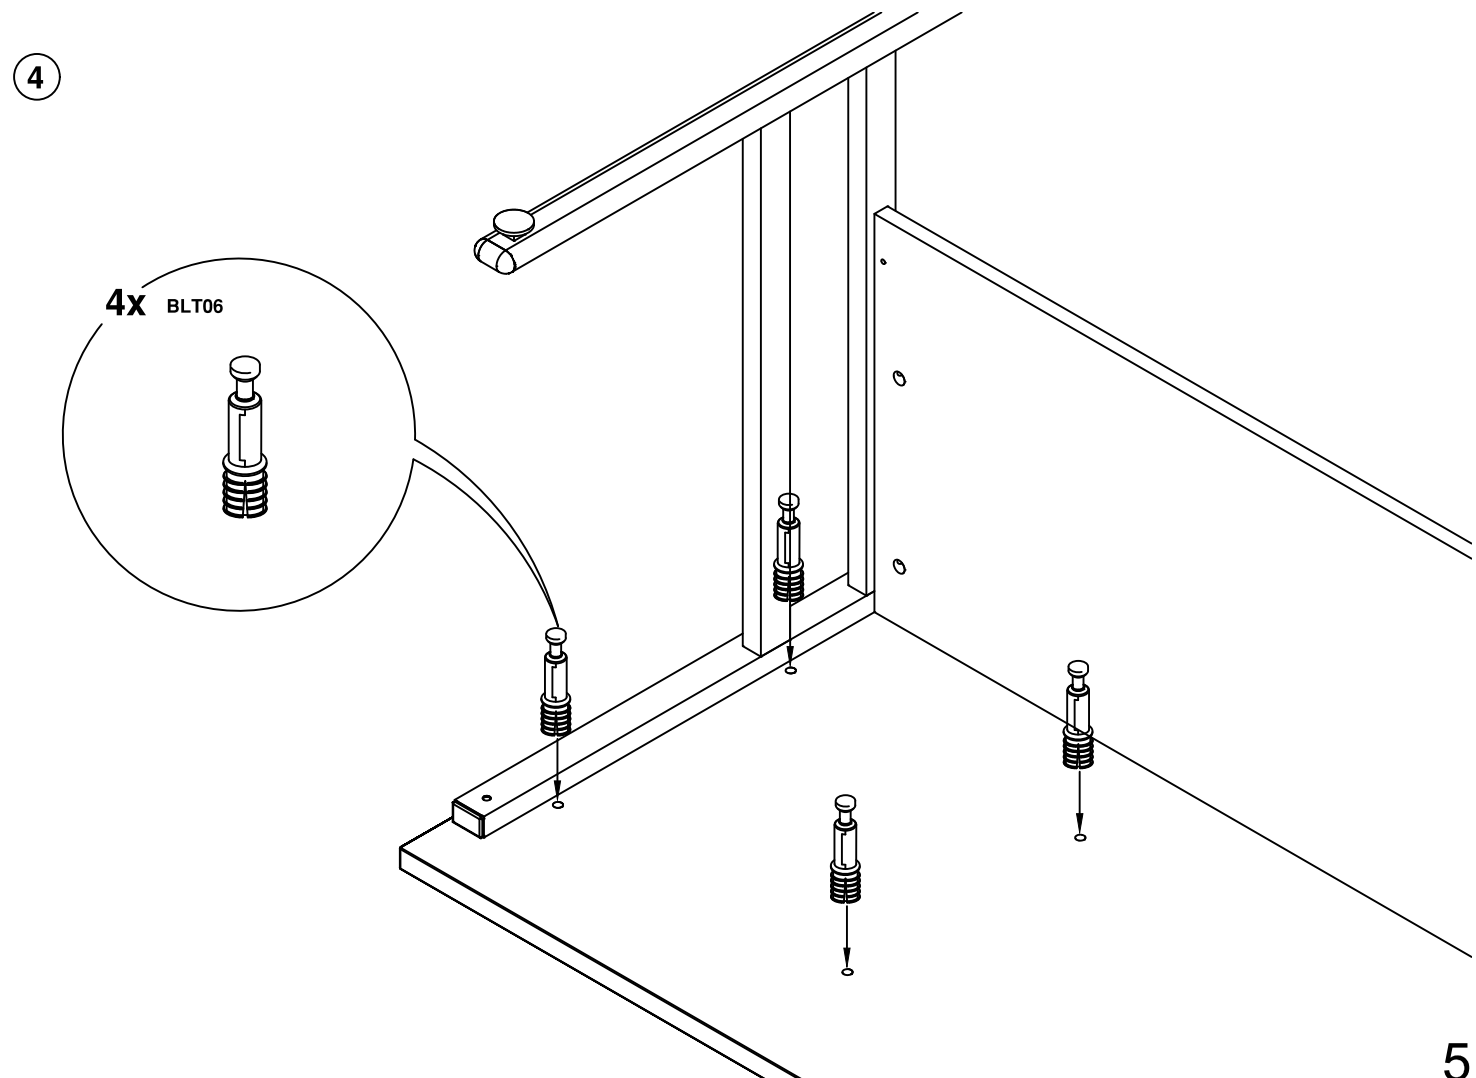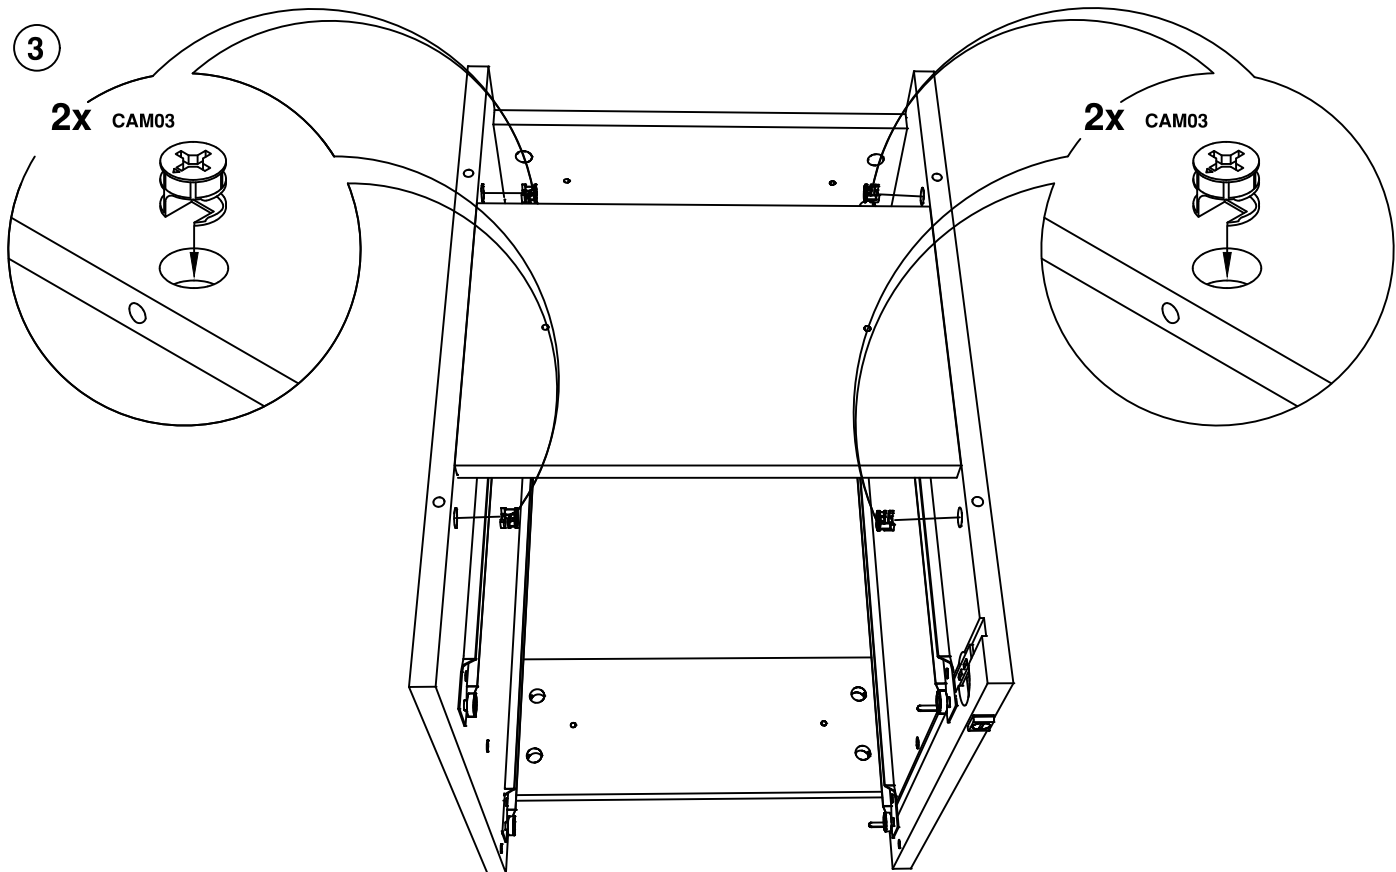


5

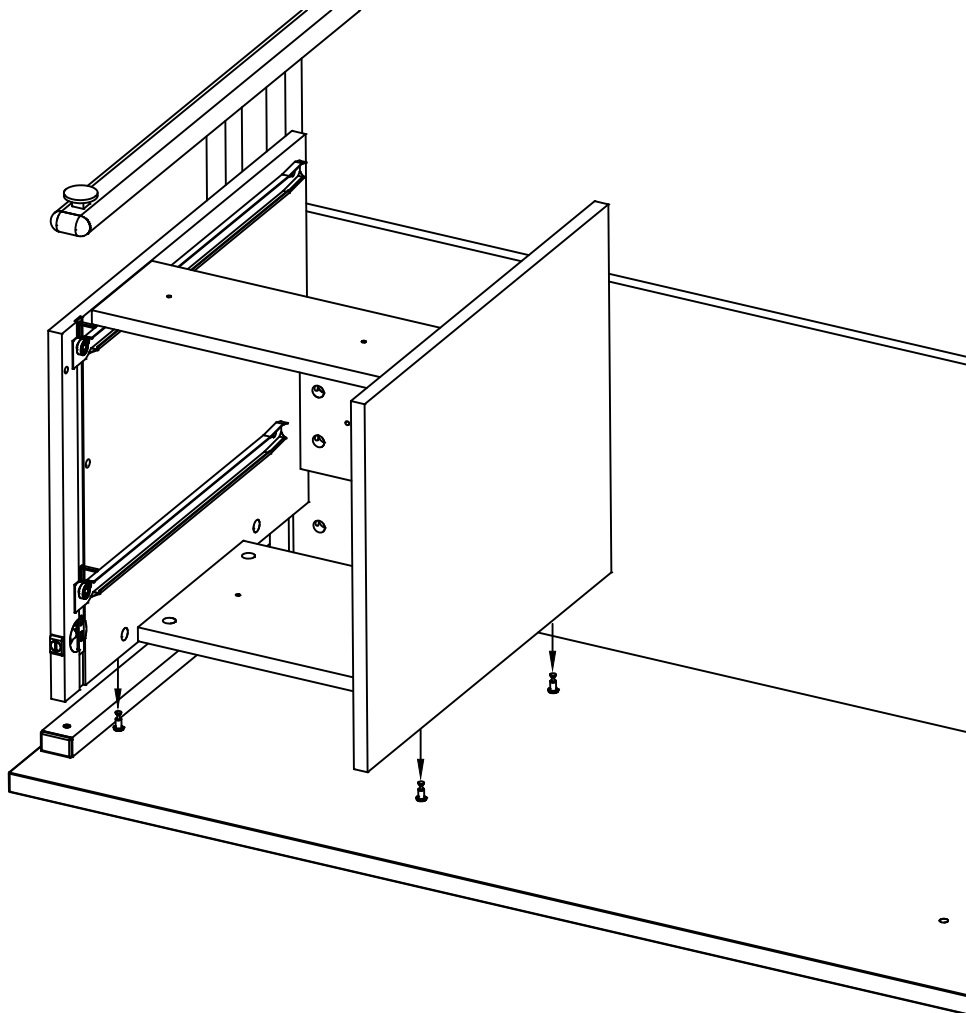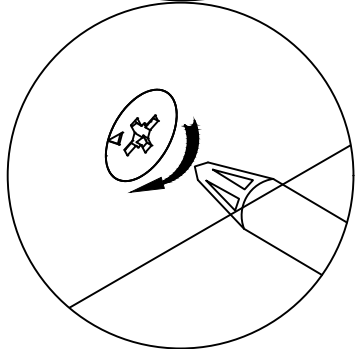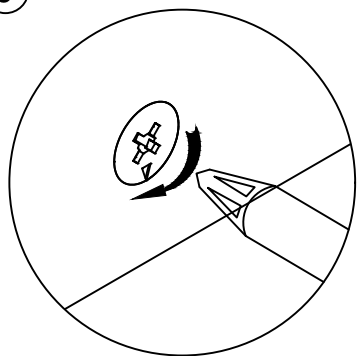

6

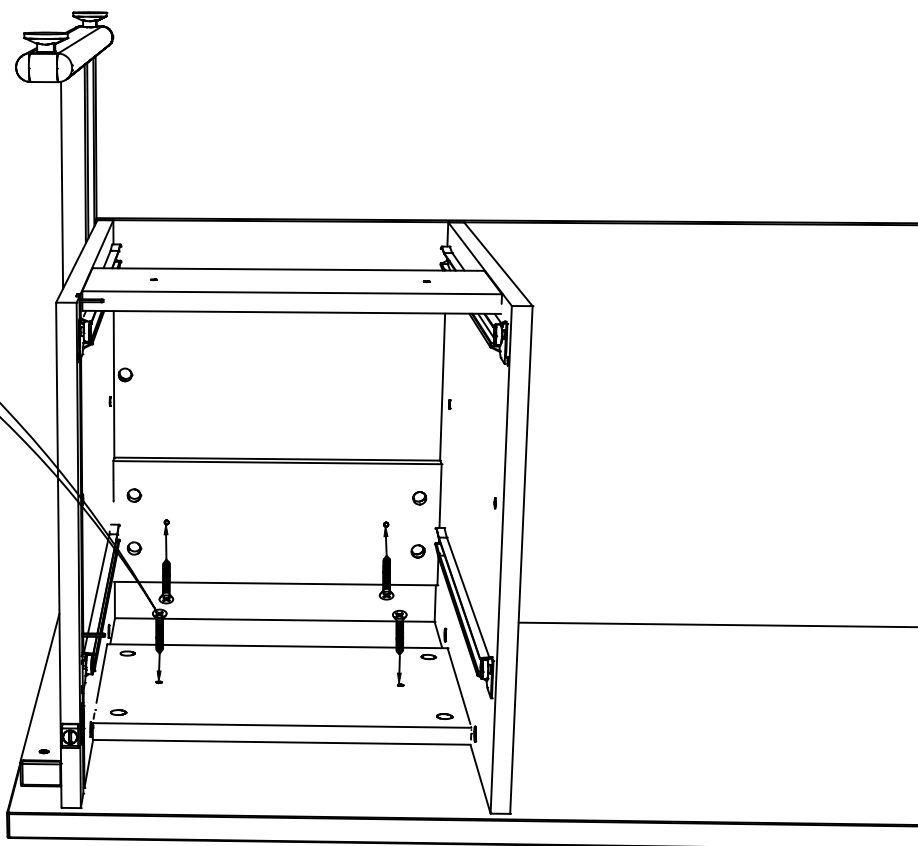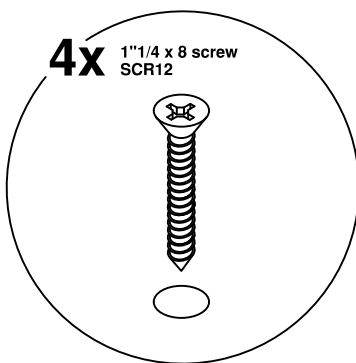

9

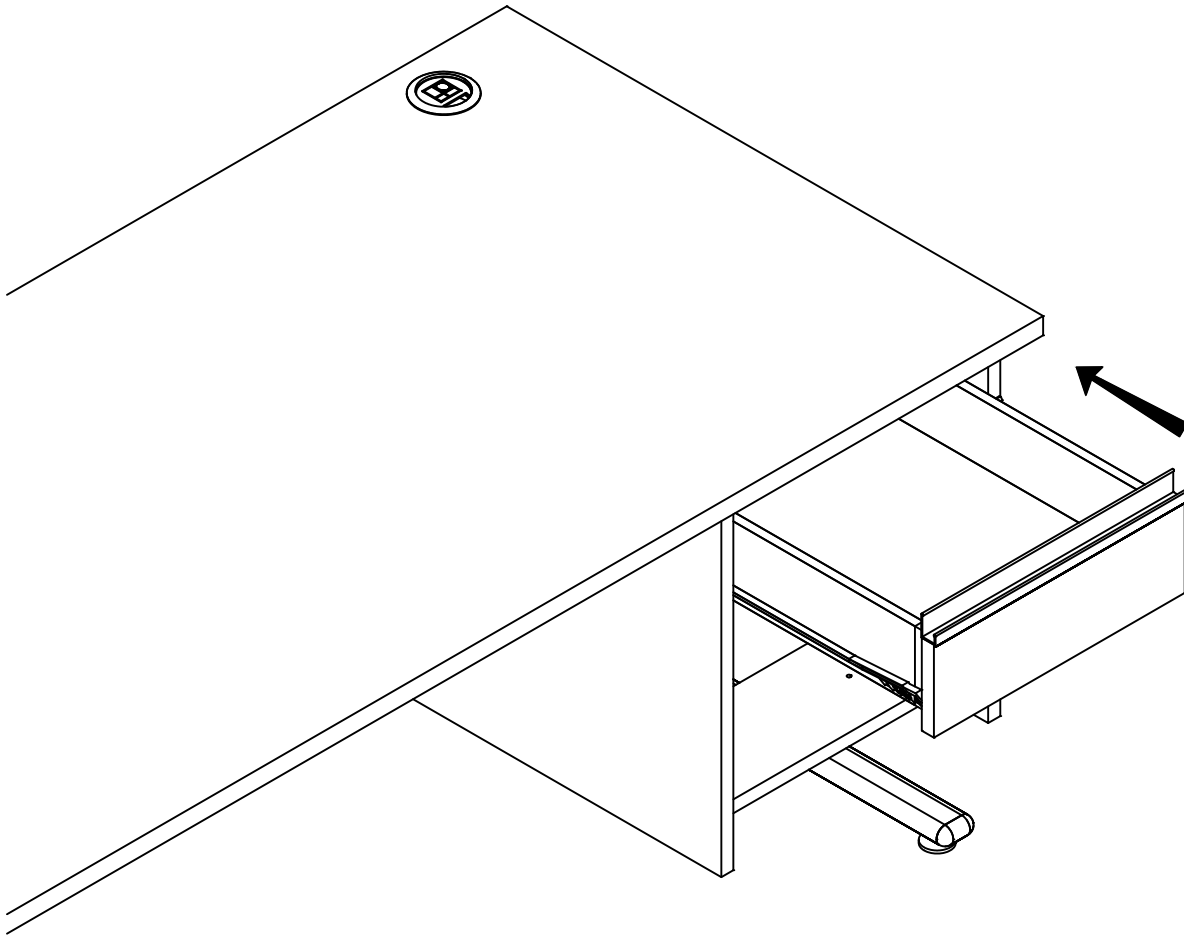

10

