





Contract H-Frame End Legs




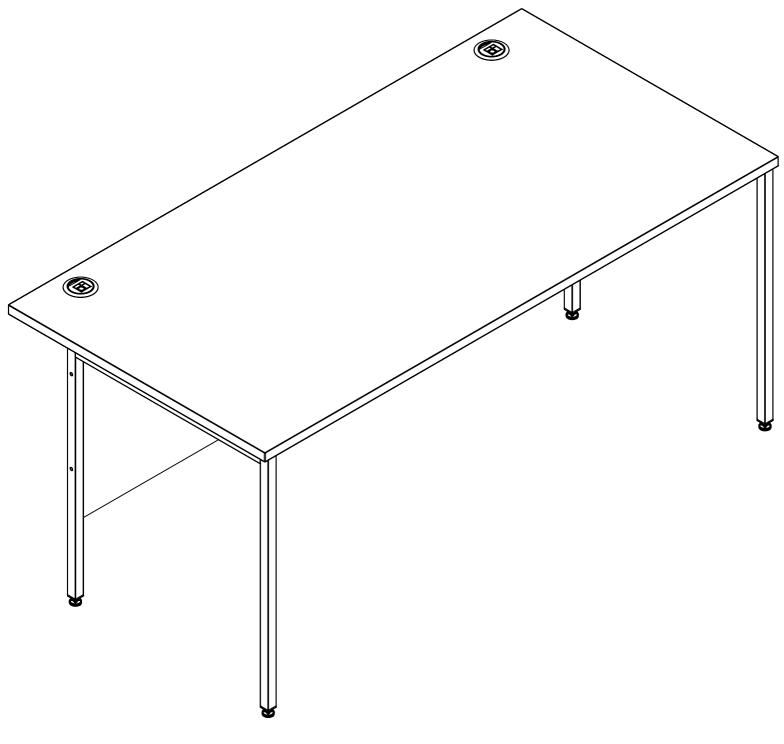





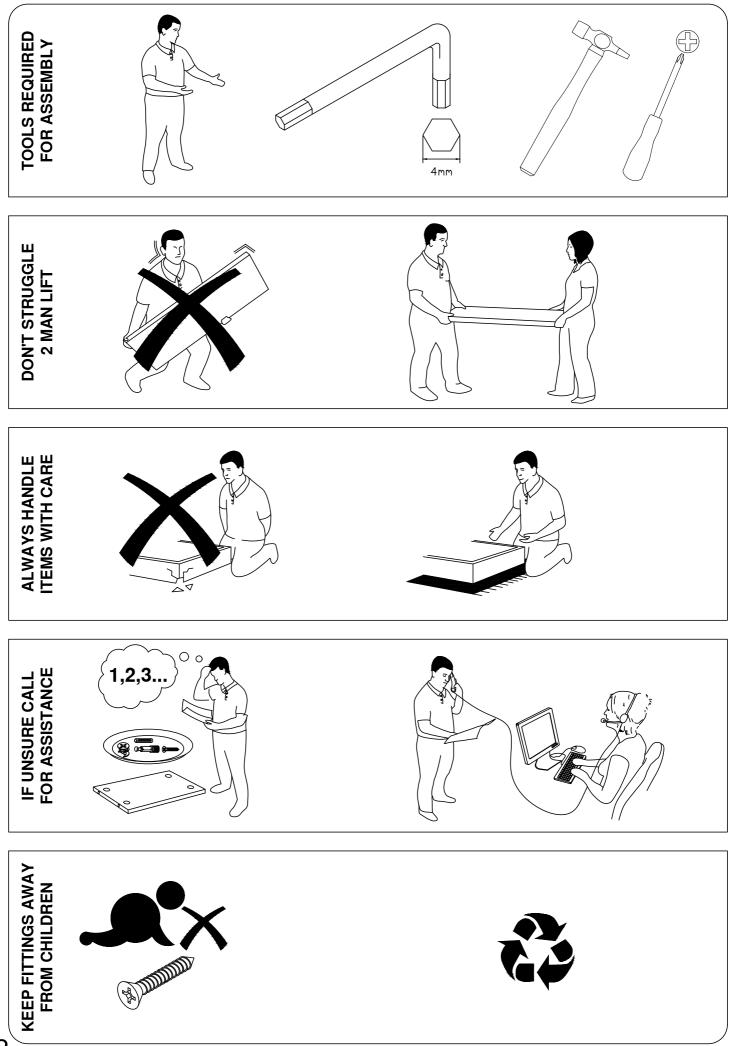


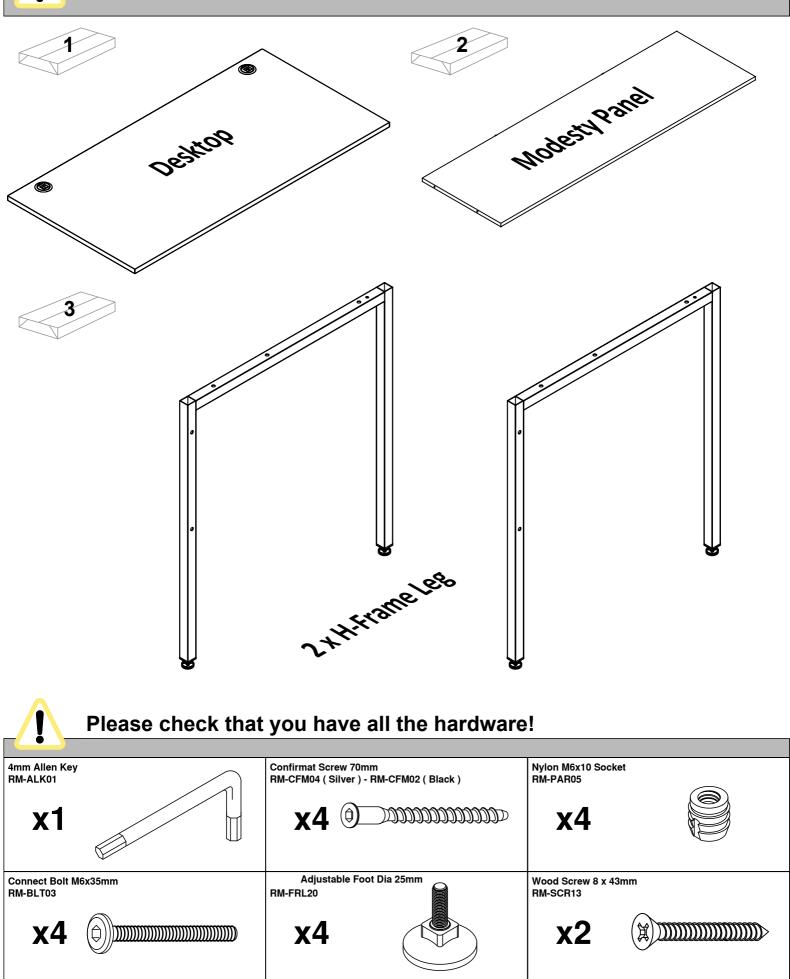


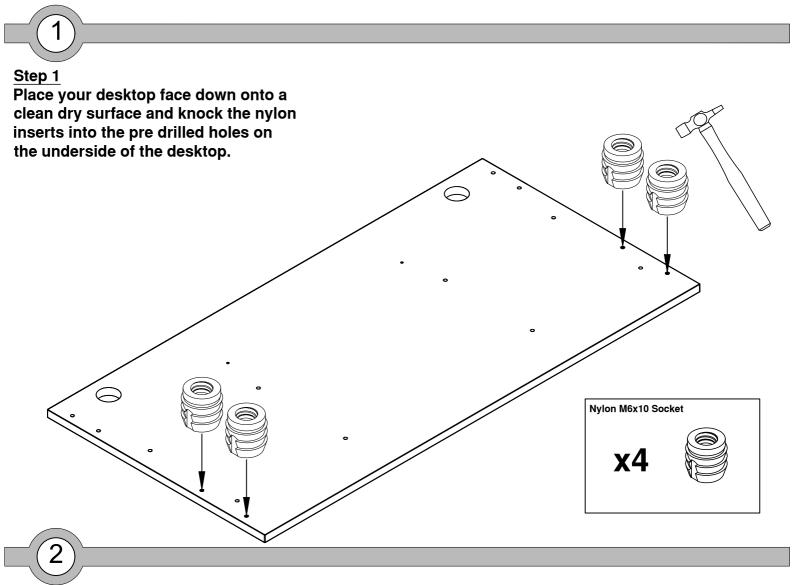



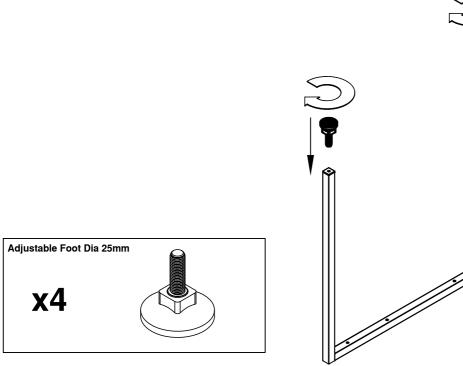

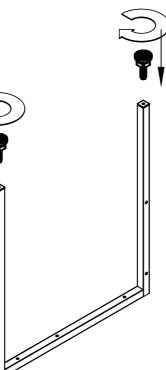

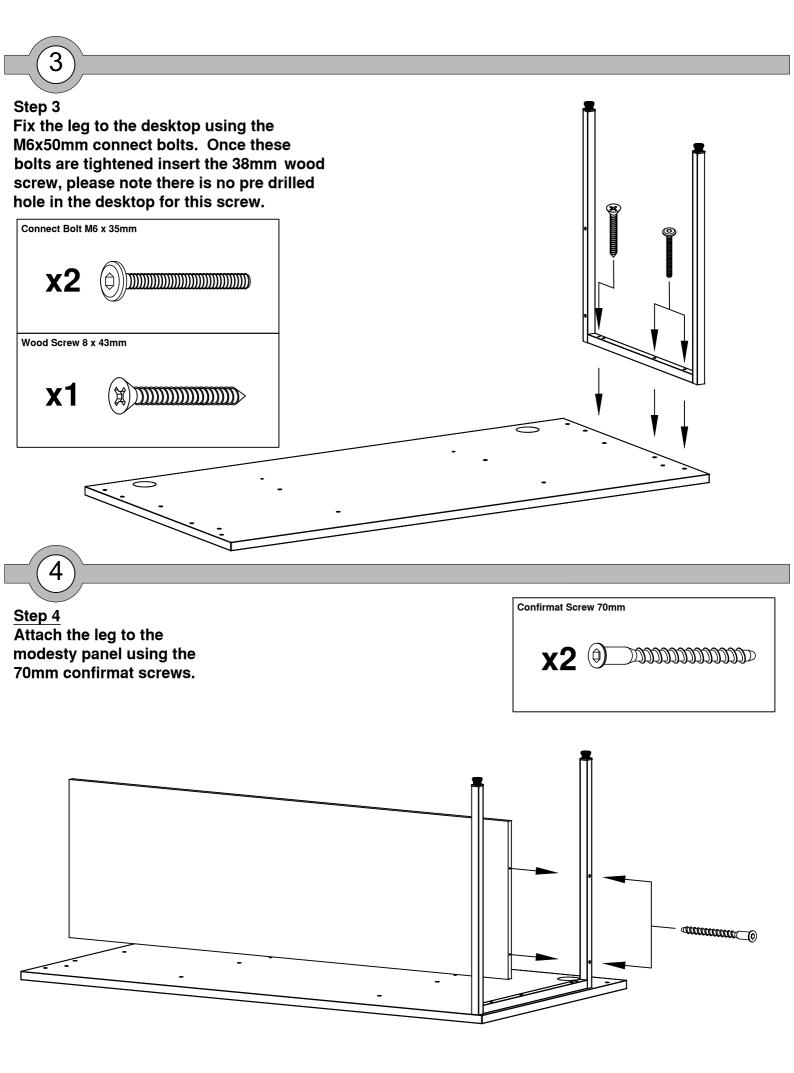

5 Confirmat Screw 70mm (Silver) Step 5 Attach the leg to the x2 🛈 modesty panel using the 70mm confirmat screws. 0**______** 6 Wood Screw 8 x 43mm Connect Bolt M6x35mm Step 6 Fix the leg to the desktop **x2 x1** 貿 using the M6x50mm connect bolts. Once these bolts are tightened insert the 38mm wood screw, please note there is no pre drilled hole in the desktop for this screw.

6